

# T22 LS

**Spare parts**

**Ersatzteile**

**Pièces détachées**


**Reserve onderdelen**

**Repuestos**

**Reservdelar**


---

**A** T22LS  
BEVEL GEAR

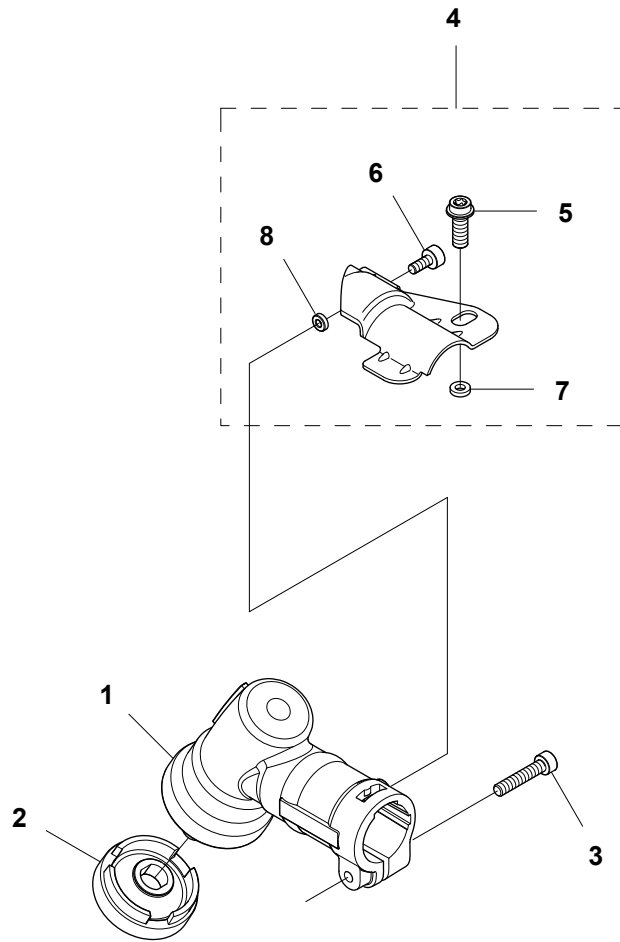


Position	Article	Quantity	Notes	Kit
1	578 16 00-01	1		1
2	578 18 52-01	1		
3	530 01 60-14	1		
4	575 72 57-01	1		
5	522 75 19-01	1		4
6	577 74 59-01	1		4
7	574 40 44-01	1		4
8	574 03 95-01	1		4

**B** T22LS  
SHAFT

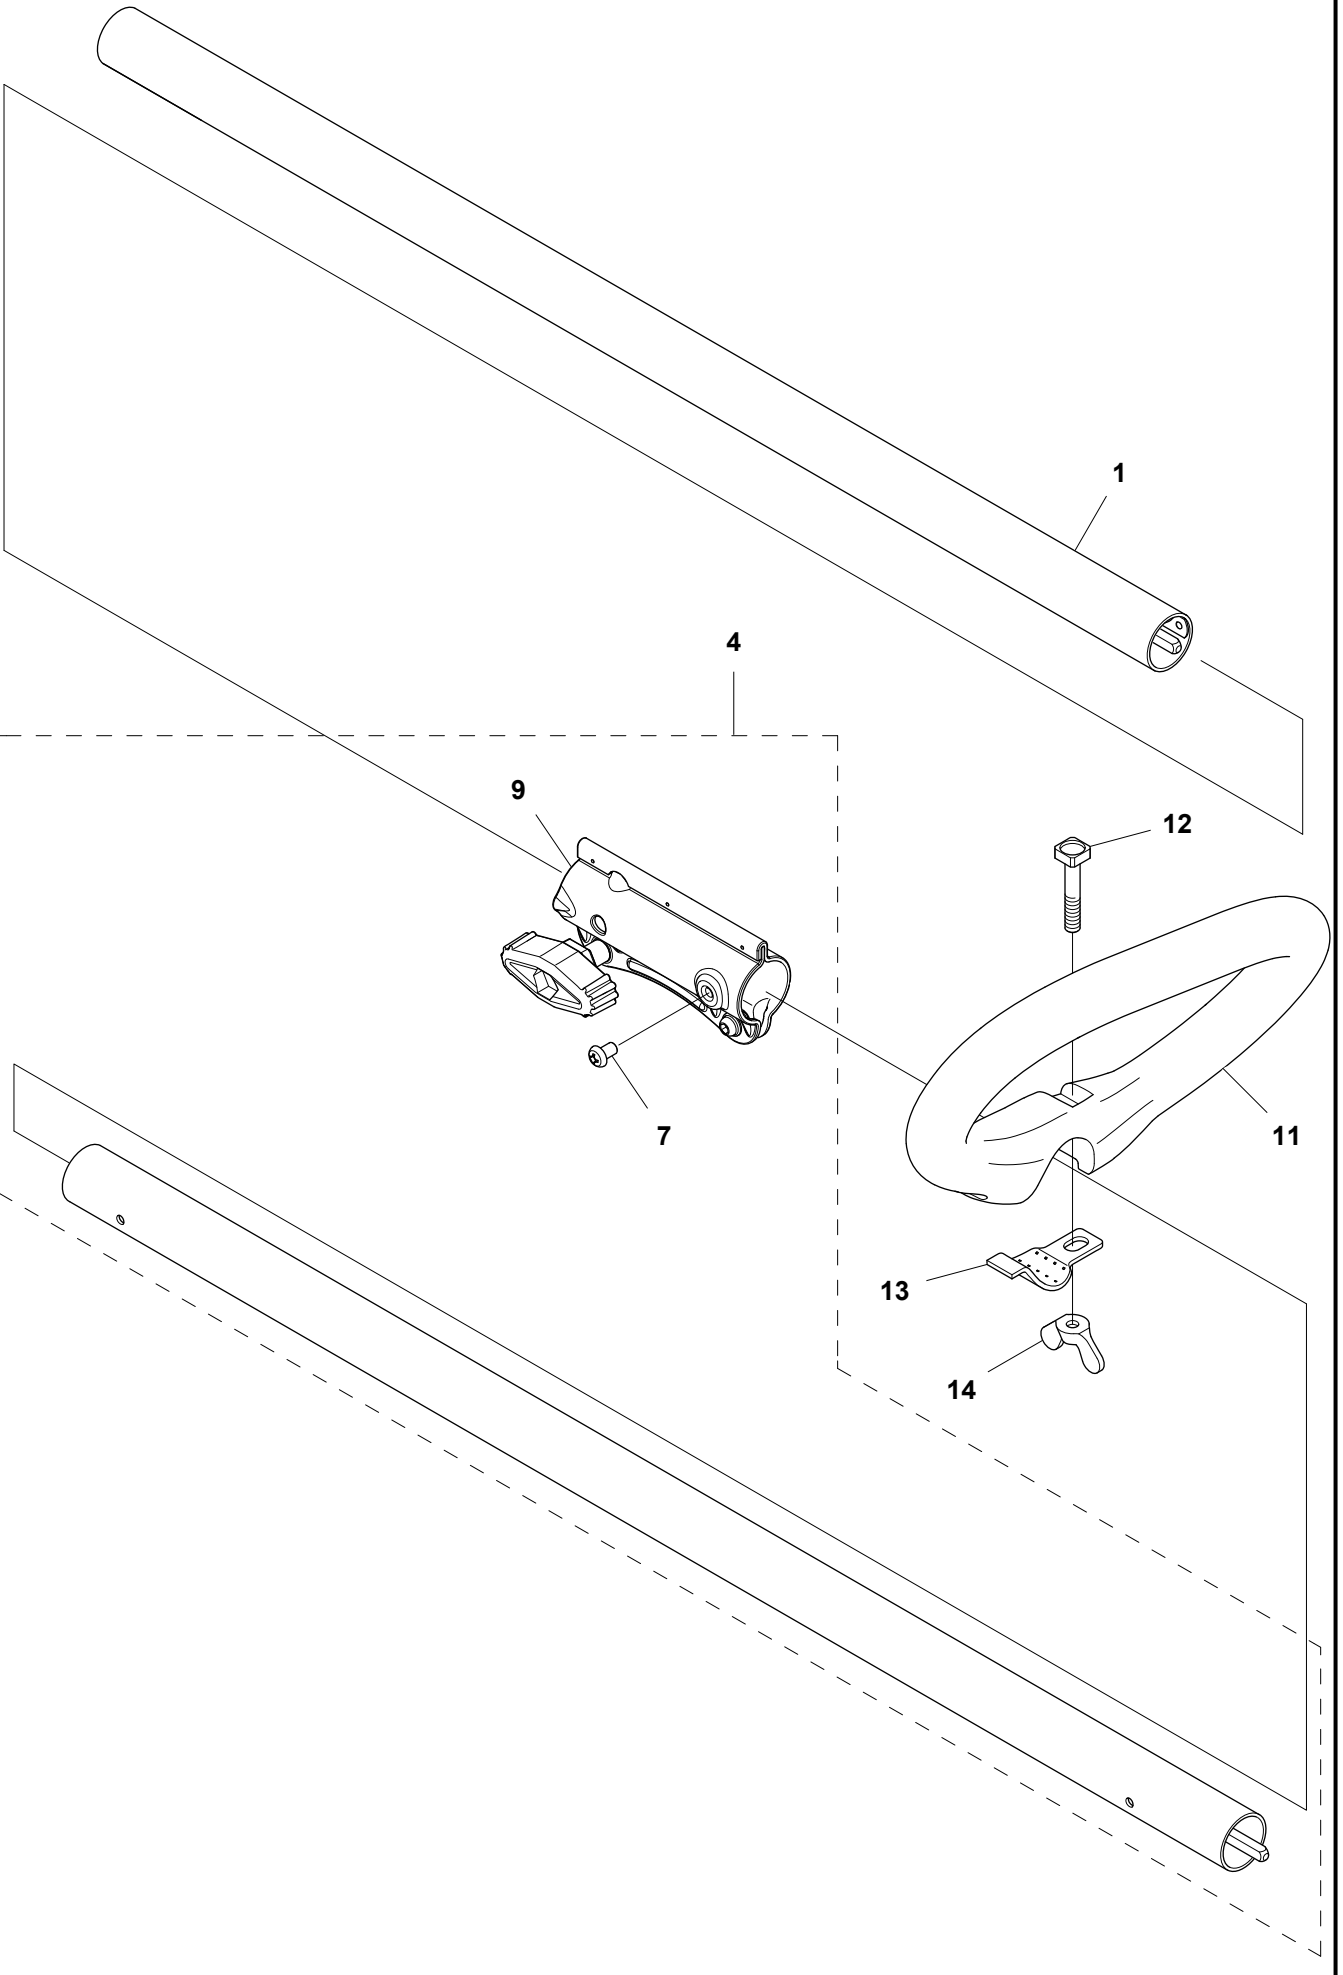


Page B T22LS		Shaft		
Position	Article	Quantity	Notes	Kit
1	578 91 02-01	1		
4	578 91 00-01	1		
7	574 18 21-01	1		4
9	578 83 63-01	1		4
11	574 29 02-02	1		
12	577 24 50-01	1		
13	574 29 04-01	1		
14	577 24 49-01	1		

**C** T22LS  
THROTTLE CONTROLS

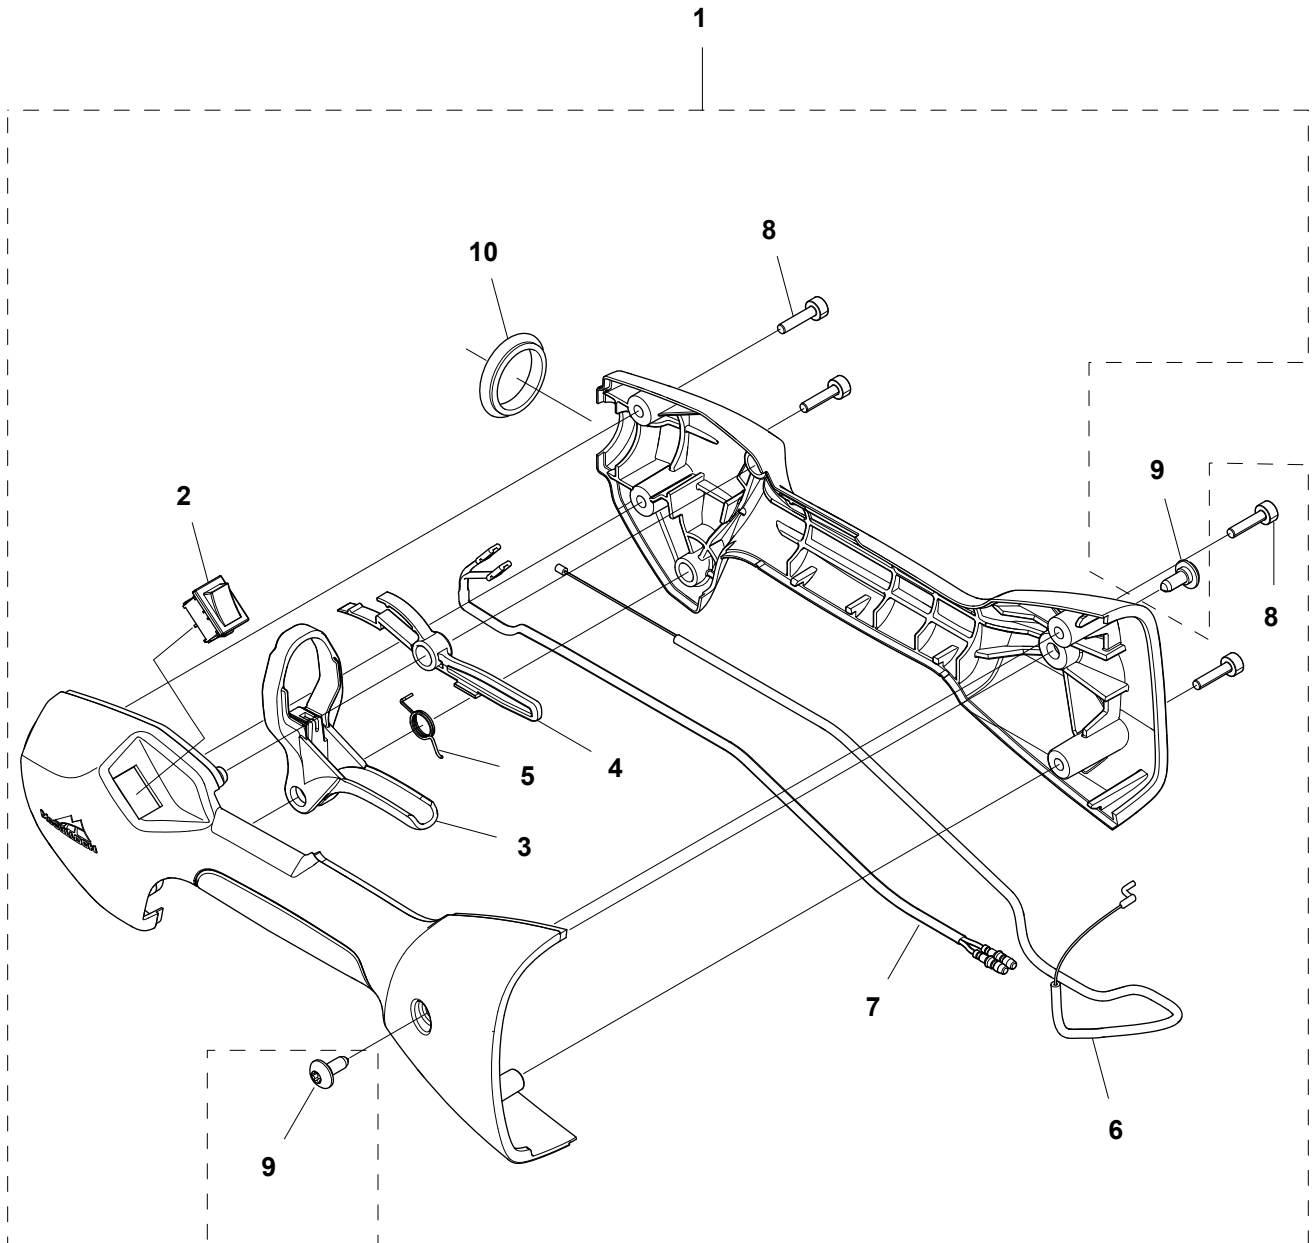

Page C		T22LS		Throttle controls	
Position	Article	Quantity	Notes	Kit	
1	574 19 31-01	1			
2	575 31 58-01	1			1
3	574 19 29-01	1			1
4	574 19 28-01	1			1
5	576 85 17-01	1			1
6	574 48 90-02	1			1
7	574 48 88-01	1			1
8	574 44 40-01	4			1
9	574 27 32-01	2			
10	574 82 44-01	1			1



**D** T22LS  
FUEL TANK

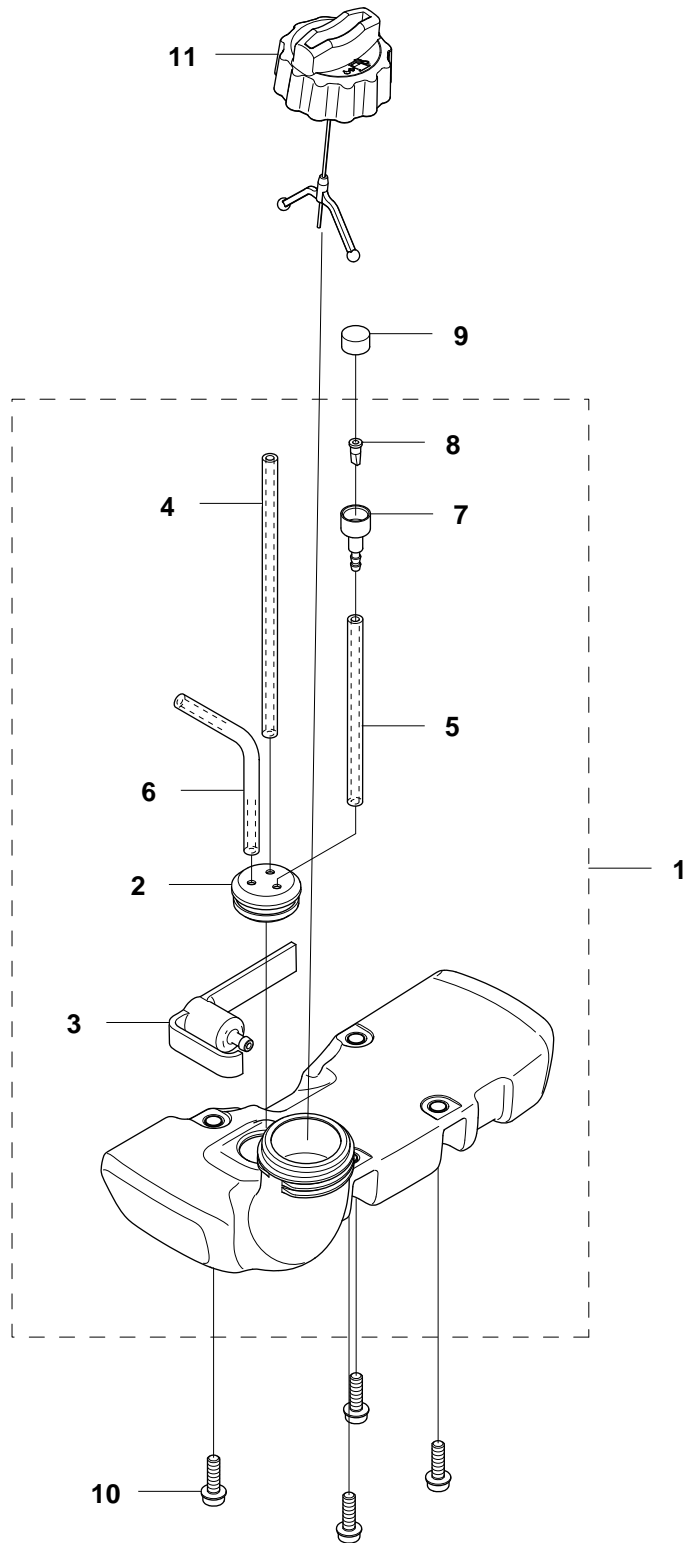




Page D		T22LS		Fuel tank	
Position	Article	Quantity	Notes	Kit	
1	577 04 48-01	1			
2	574 26 30-01	1			1
3	574 60 39-01	1			1
4	574 60 02-02	1	150mm		1
5	574 60 01-01	1	155mm		1
6	578 97 56-03	1	225mm		1
7	575 48 44-01	1			1
8	575 48 45-01	1			1
9	575 48 46-01	1			
10	525 75 51-01	4			
11	574 26 90-01	1			

**E** T22LS  
CLUTCH

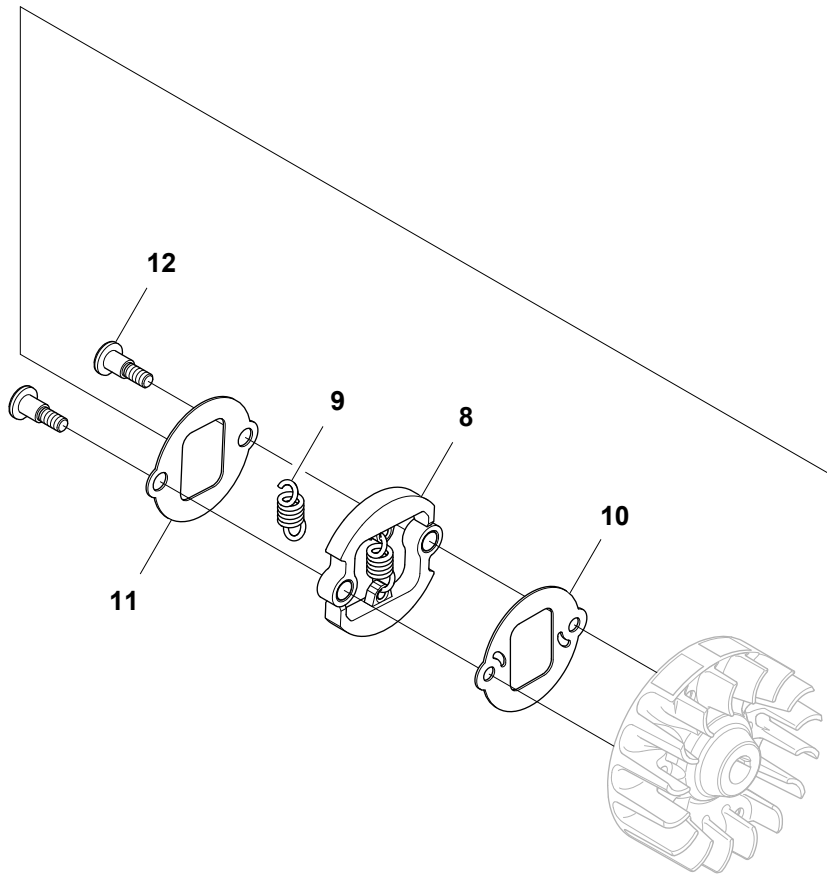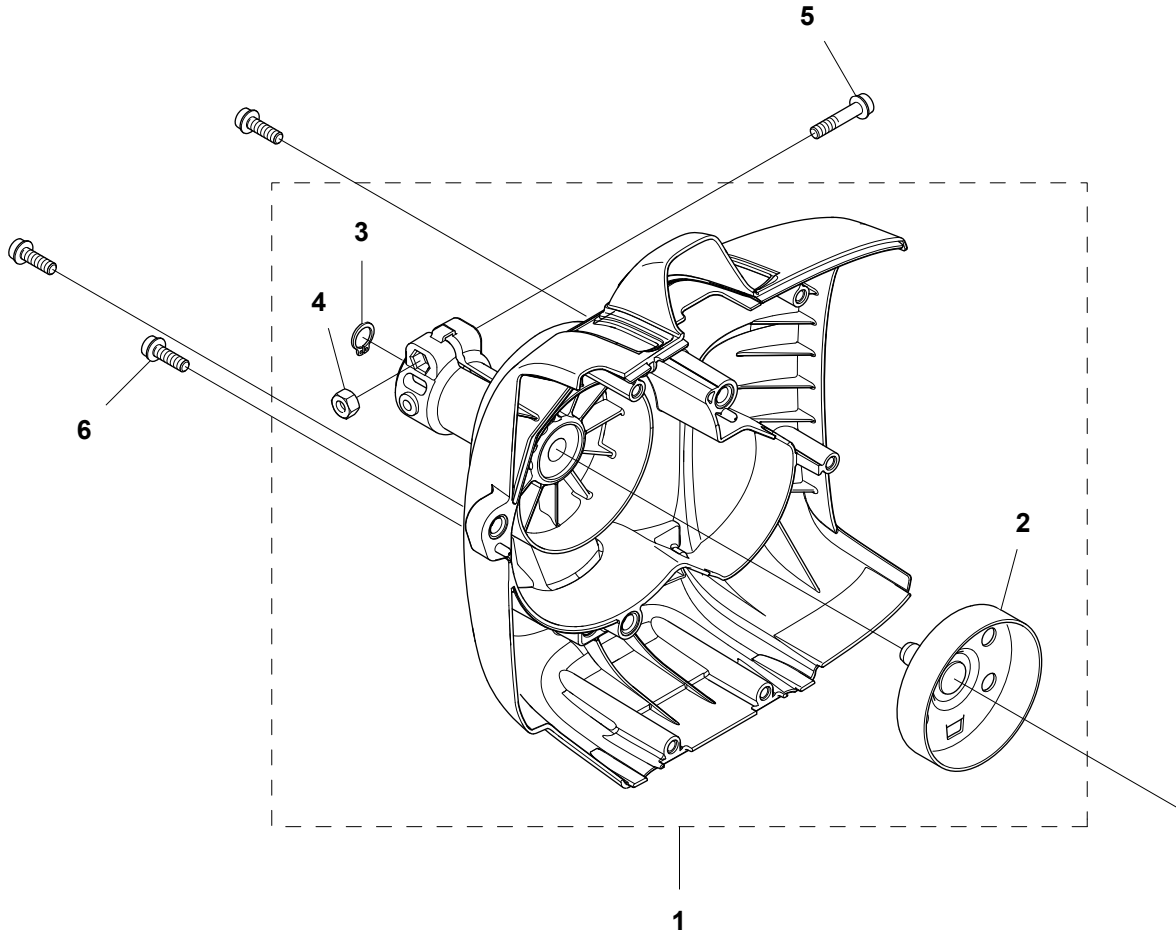

Page E		T22LS		Clutch	
Position	Article	Quantity	Notes	Kit	
1	578 22 41-01	1			
2	525 59 37-01	1		1	
3	735 31 12-00	1		1	
4	731 23 14-01	1		1	
5	525 75 51-04	1			
6	525 75 51-01	3			
8	537 03 22-01	1			
9	503 81 60-01	1		8	
10	537 04 68-02	1			
11	537 04 67-02	1			
12	503 84 29-02	2			

**F** T22LS  
MUFFLER


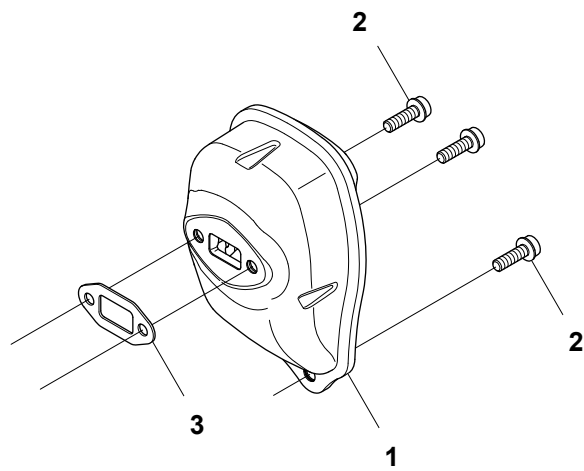


<b>Page F T22LS</b>		<b>Muffler</b>		
<b>Position</b>	<b>Article</b>	<b>Quantity</b>	<b>Notes</b>	<b>Kit</b>
1	523 01 16-01	1		
2	525 75 51-01	3		
3	522 99 73-01	1		



Position	Article	Quantity	Notes	Kit
1	576 88 73-01	1		
2	524 85 37-01	1		
3	574 24 27-01	1		
4	578 18 83-01	1		
5	537 21 32-02	1		
6	573 92 58-01	1		
7	573 92 58-02	2		
8	574 38 67-01	1		
9	522 91 12-01	1		
10	522 91 85-01	1		
11	525 76 09-04	4		
12	525 54 85-01	1		
13	579 22 88-01	1		



# H T22LS STARTER

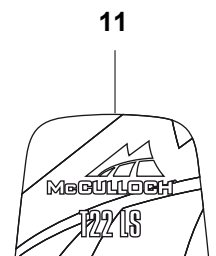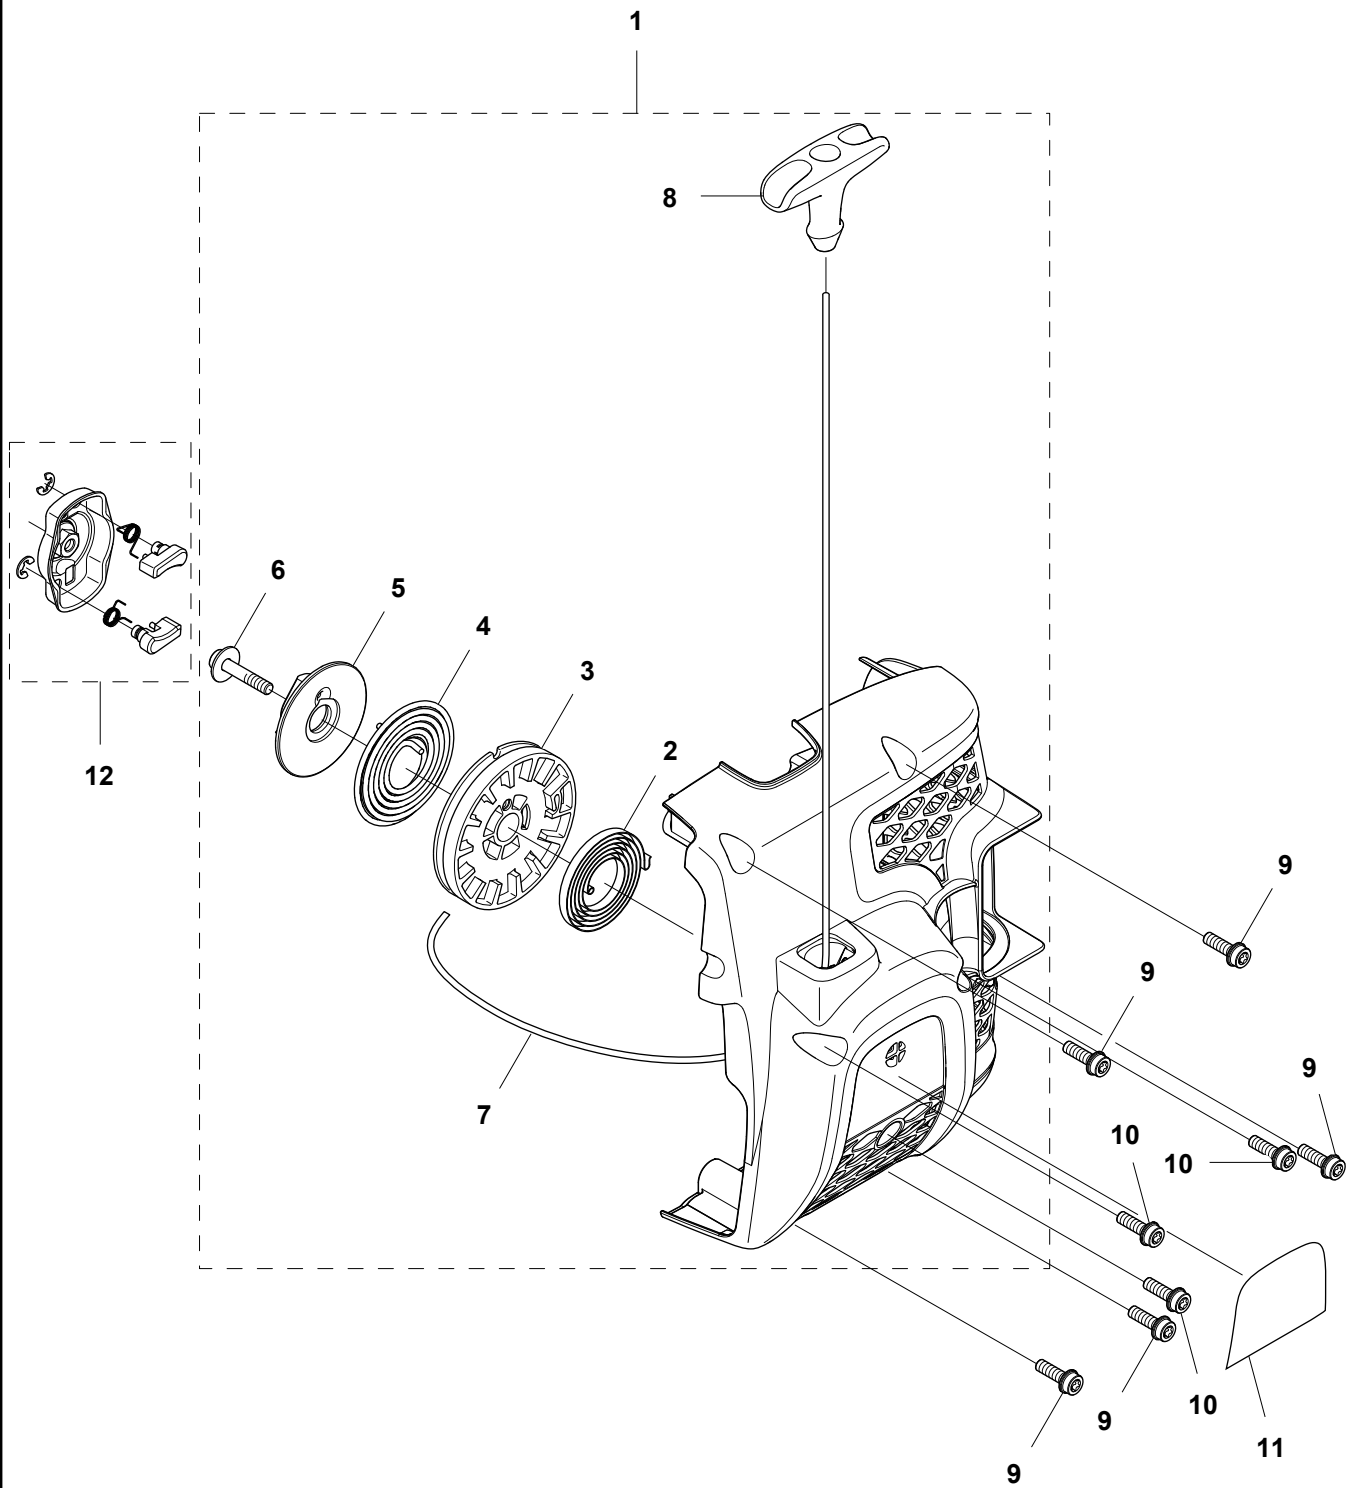




Position	Article	Quantity	Notes	Kit
1	578 22 45-01	1		
2	525 83 83-01	1		1
3	525 59 38-01	1		1
4	525 59 40-01	1		1
5	525 59 39-01	1		1
6	577 22 61-03	1		1
7	574 28 69-01	1		1
8	577 27 16-01	1		1
9	573 92 58-01	5		
10	525 75 51-01	3		
11	579 21 84-02	1		
12	503 87 33-05	1		

**J** T22LS  
IGNITION SYSTEM

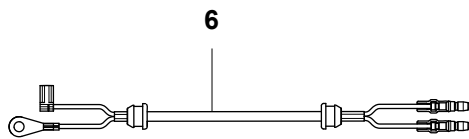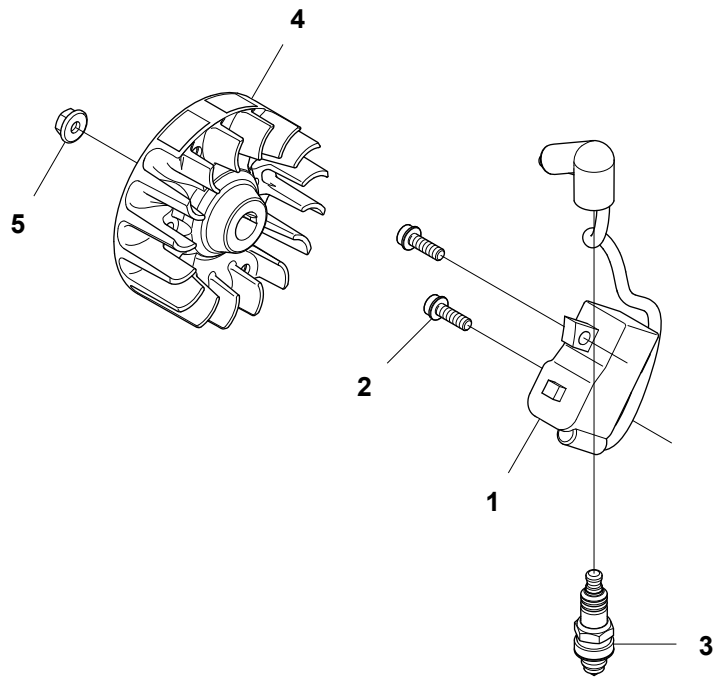


Page J		T22LS		Ignition system	
Position	Article	Quantity	Notes	Kit	
1	574 37 55-01	1			
2	525 75 51-01	2			
3	503 23 54-01	1			
4	537 24 96-02	1			
5	731 71 16-51	1			
6	574 48 89-01	1			

**K** T22LS  
CYLINDER & PISTON

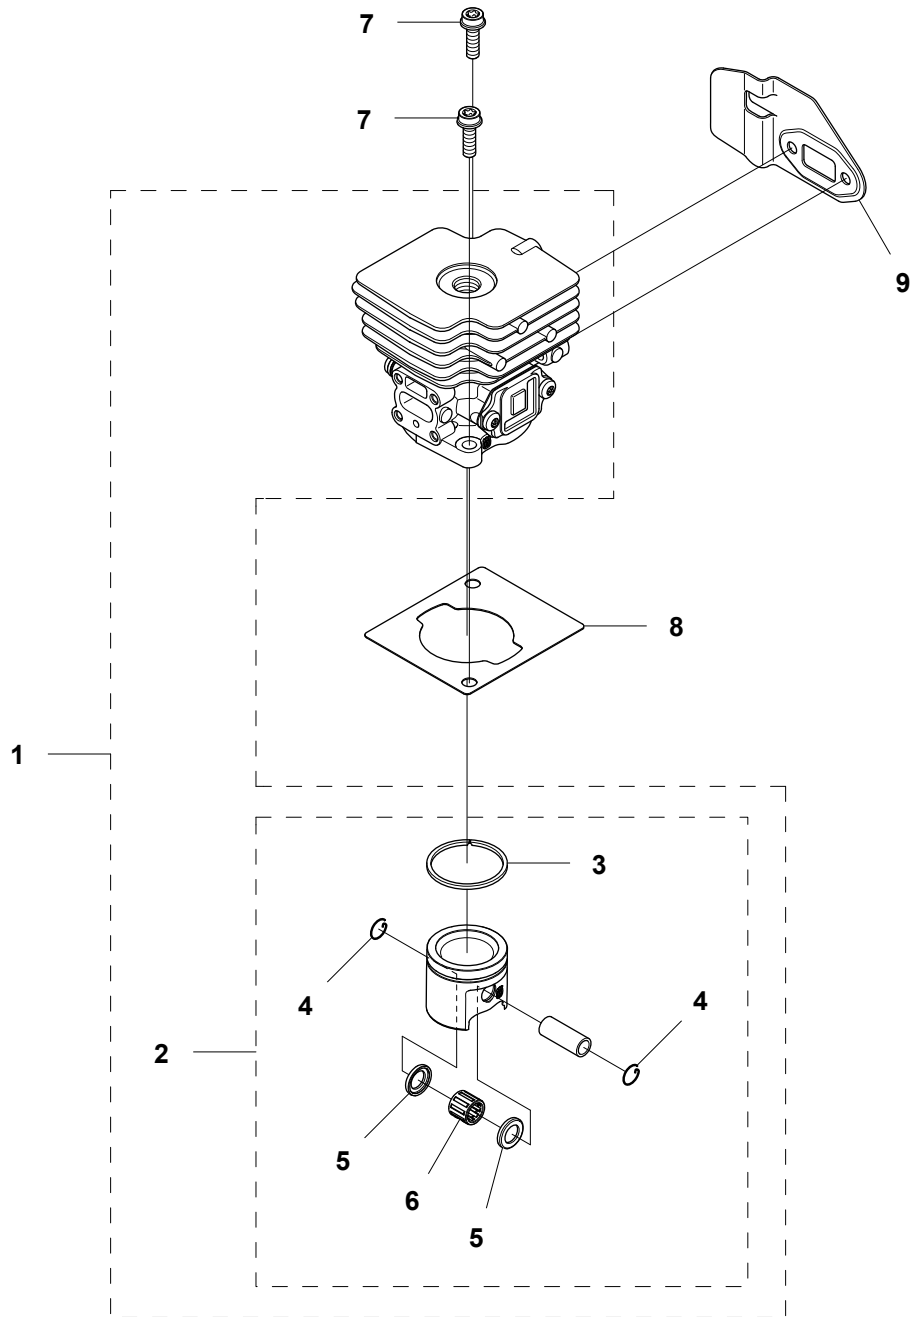


Position	Article	Quantity	Notes	Kit
1	577 38 03-01			
2	510 22 36-02	1		1
3	505 15 58-01	1		1,2
4	737 44 08-00	2		1,2
5	525 57 77-01	2		1,2
6	575 50 49-01	1		1,2
7	525 75 51-02	2		
8	522 91 84-01	1		
9	522 99 74-01	1		

**L** T22LS  
CRANK SHAFT

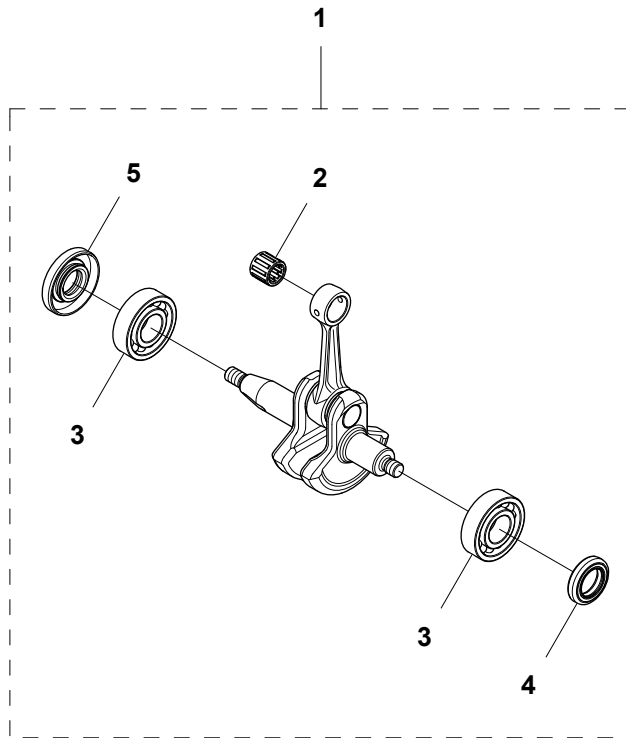

<b>Position</b>	<b>Article</b>	<b>Quantity</b>	<b>Notes</b>	<b>Kit</b>
1	577 38 05-01	1		
2	575 50 49-01	1		1
3	738 21 01-10	2		1
4	503 26 02-02	1		1
5	574 48 20-01	1		1



**M** T22LS  
CRANKCASE

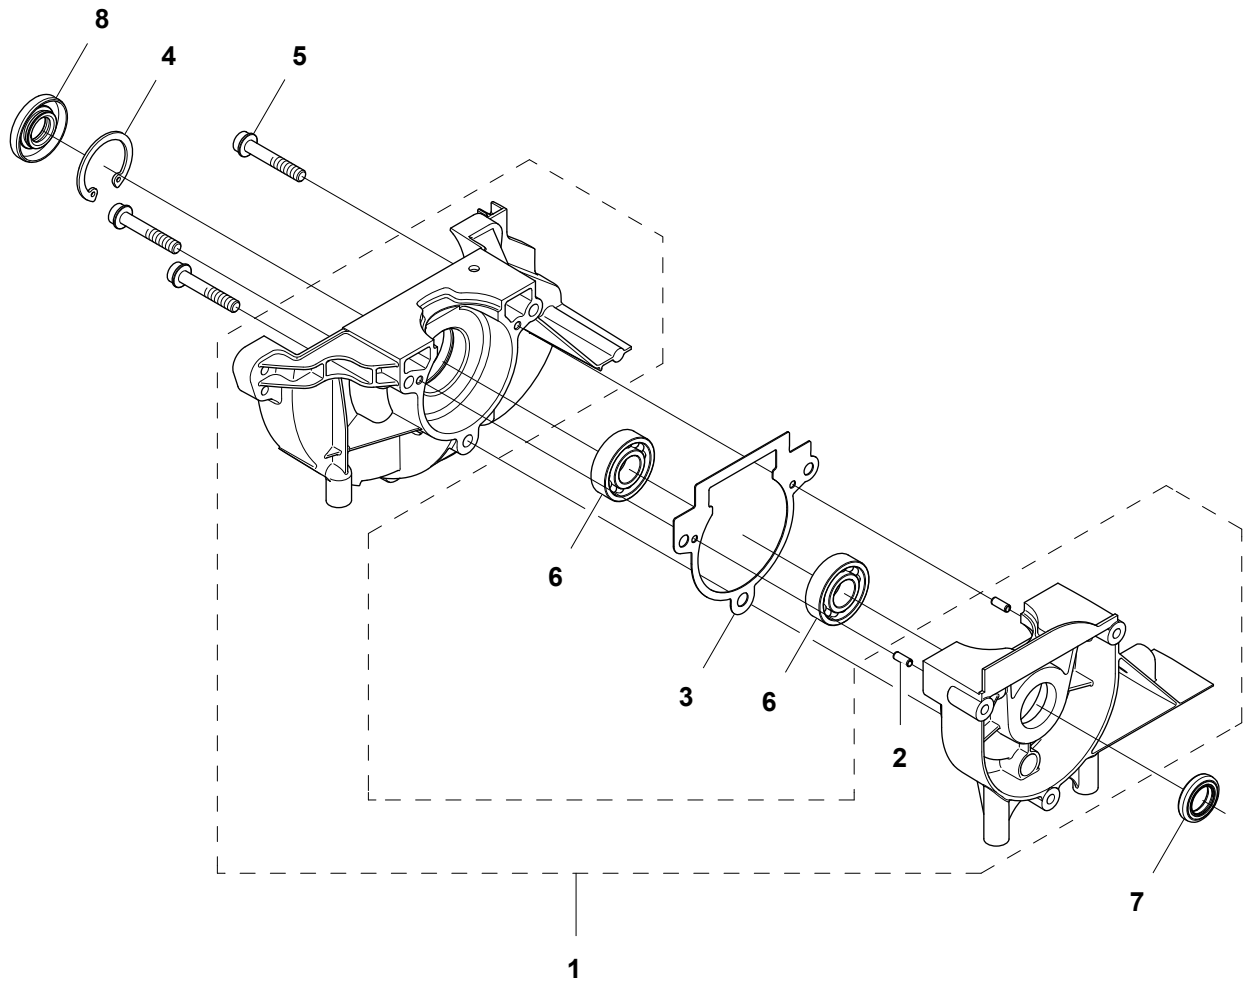



Page M		T22LS		Crankcase	
Position	Article	Quantity	Notes	Kit	
1	522 87 83-01	1			
2	522 87 84-01	2		1	
3	522 91 83-01	1			
4	735 31 28-10	1			
5	525 75 51-03	3			
6	738 21 01-10	2			
7	503 26 02-02	1			
8	574 48 20-01	1			

**N** T22LS  
ACCESSORIES

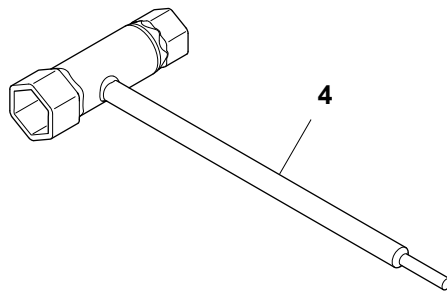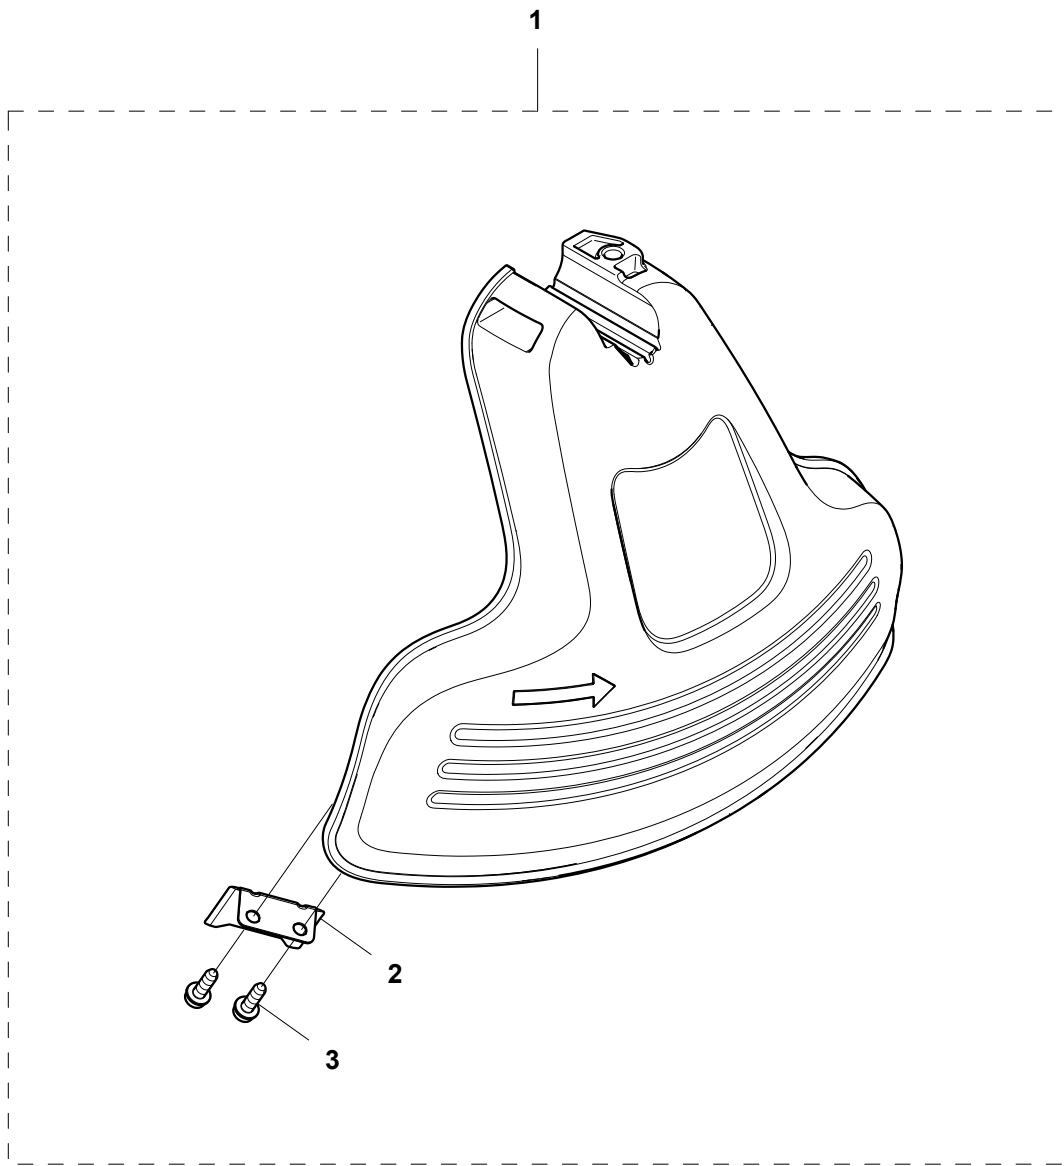

Page N		T22LS		Accessories	
Position	Article	Quantity	Notes	Kit	
1	574 55 72-01	1			
2	530 05 22-86	1			1
3	530 01 58-14	2			1
4	575 73 82-01	1			