


# MODEL 24760x20D

# REPAIR PARTS GRASS BAGGER

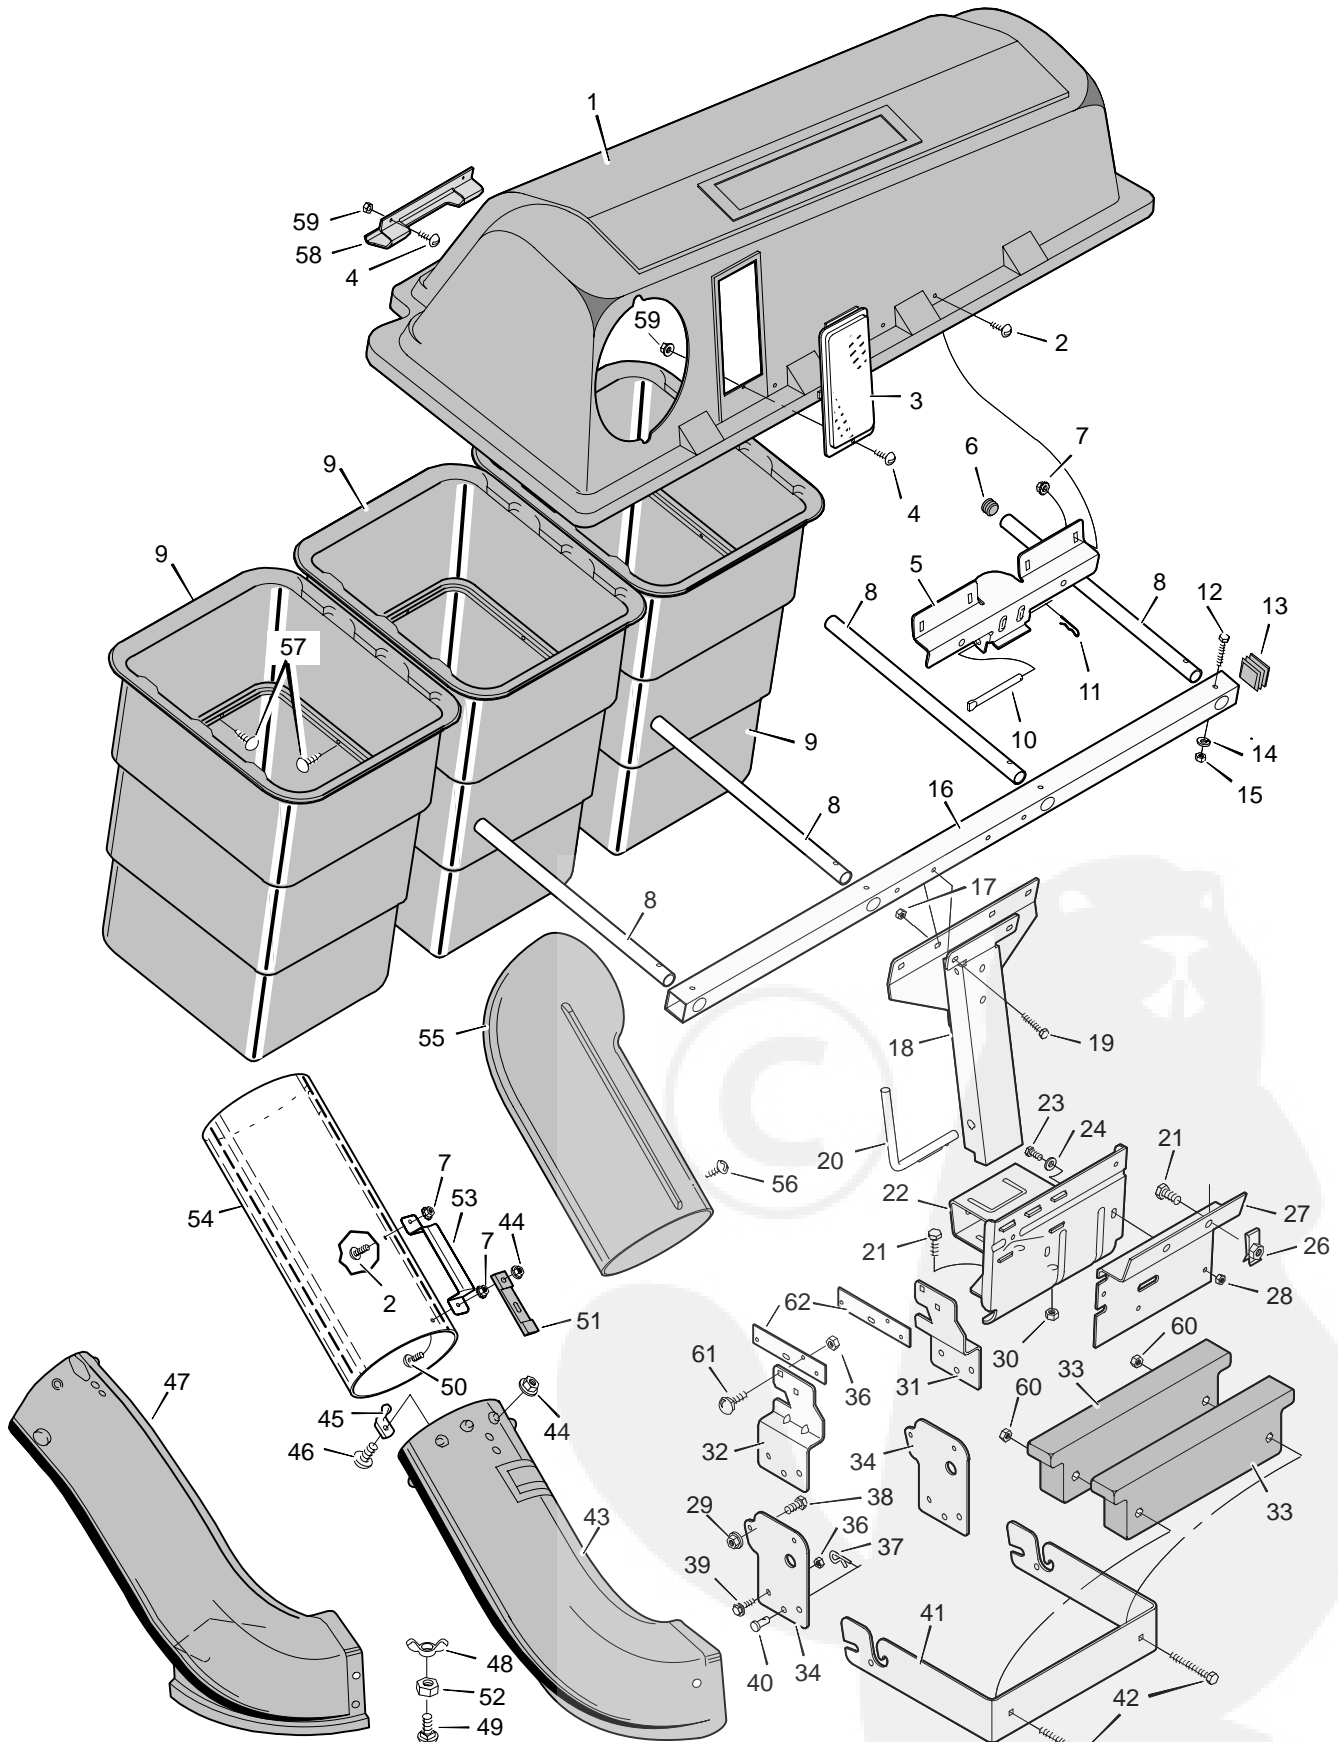

107cm / 42-inch

117cm / 46-inch

# MODEL 24760x20D

# REPAIR PARTS GRASS BAGGER

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Cover, Bagger	54750	34	Bracket, Hanger	54771E701
2	Screw	4x24	36	Nut	15x84
3	Window	54575	37	Pin, Hair	31x4
4	Screw	4x21	38	Bolt	1x91
5	Hinge, Bracket	54754E701	39	Bolt	9x4
6	Plug	54776	40	Pin, Clevis	29x96
7	Nut, Hex	15x66	41	Bracket, Front Weight	54770E701
8	Tube, Container	54753	42	Bolt	1x134
9	Container	54752	43	Extension, Chute	54774
10	Pin, Hinge	54407	44	Locknut, Flange	15x89
11	Pin, Hair	31x6	45	Pin, Latch	54563
12	Bolt	1x98	46	Bolt, Carriage	2x39
13	Plug	54777	47	Extension, Chute	54692
14	Lockwasher	18x15	48	Wingnut	14x86
15	Nut	15x2	49	Bolt, Carriage	2x74
16	Tube, Support	54761E701	50	Screw	4x71
17	Nut	15x118	51	Latch, Rubber	54695
18	Channel Assembly	54757E701	52	Nut	15x109
19	Bolt	1x138	53	Handle, Connector Tube	54416E701
20	Pin, Channel Mount	54408	54	Tube, Connecting	54778
21	Bolt, Hex	1x125	55	Elbow	91944
22	Plate, Mounting	54769E701	56	Screw	26x239
23	Bolt, Hex	1x84	57	Fastener, Panel	193x1
24	Washer	17x51	—	Bag, Plastic	54503
26	U–Nut	28x69	58	Handle, Plastic	54537
27	Adapter, Mounting Plate	54758E701	59	Nut, Hex	15x81
28	Nut, Flange	15x108	60	Nut	15x43
29	Nut, Flange	15x88	61	Bolt	25x6
30	Nut, Hex	15x41	62	Plate, Support	54762E701
31	Bracket, Left Hanger	54773E701	63	Blade, ( 117cm / 46–inch)	92117E701
32	Bracket, Right Hanger	54772E701		Blade, ( 107cm / 42–inch)	92418E701
33	Weight, Front	54775	—	Book, Instruction (English)	F–96949