


Key No.	Description	Part No.	Key No.	Description	Part No.	Key No.	Description	Part No.
1	Engine *	—	9	Washer, Belleville	17x137	17	Extension, Rear	71746E701
2	Housing	70120A	10	Washer	17x124	18	Deflector, Rear	71797
3	Bolt, Axle	9x10	11	Bolt, Hex	1x142	20	Pin	71800 Z
4	Wheel and Tire	71597	12	Adapter, Blade	71056	21	Screw	26x274
5	Washer	10851 Z	13	Deflector, Chute	42919	24	Bolt, Hex	1x85
6	Locknut, Flange	15x68	14	Push-On Cap	28x42	25	Washer	18x31
7	Bolt, Engine	25x6	15	Spring	166x5	26	Locknut, Flange	15x68
8	Blade	42785E701	16	Pin, Pivot	215x11 Z			

* Parts are available from a Authorized Engine Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the classified pages of the telephone directory

MODEL 20221x50A

REPAIR PARTS

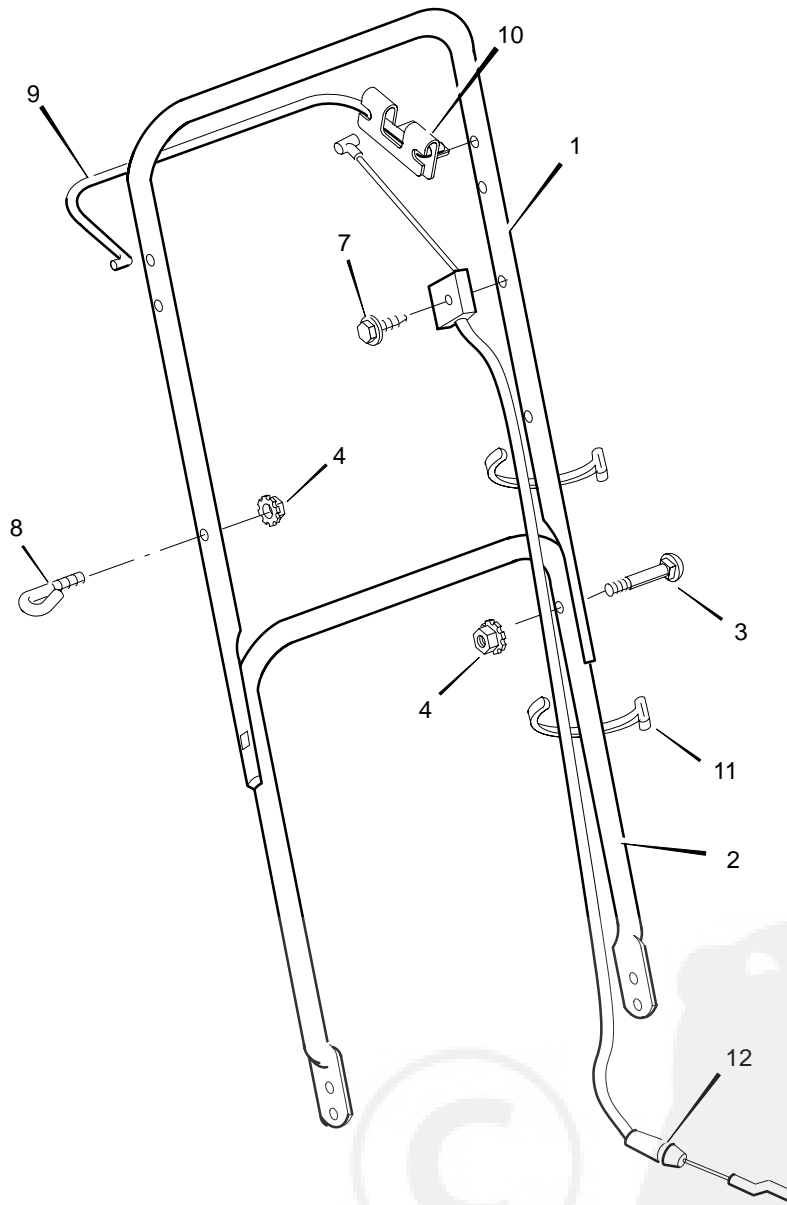

Key No.	Description	Part No.	Key No.	Description	Part No.	Key No.	Description	Part No.
1	Handle, Upper	43838E724	7	Screw	26x220	10	Bracket, Stop Lever	43628 BC
2	Handle, Lower	71151E724	8	Guide, Rope	43956	11	Fastener, Cable	71372
3	Screw	3x136	9	Lever, Engine Stop	43786E700	12	Engine Stop Cable	671947
4	Locknut	15x116						