




Prod.No: 954 07 07-11  
 Engine: TVS 90 - 46043 B

## SPAREPARTS


107 26 82-61

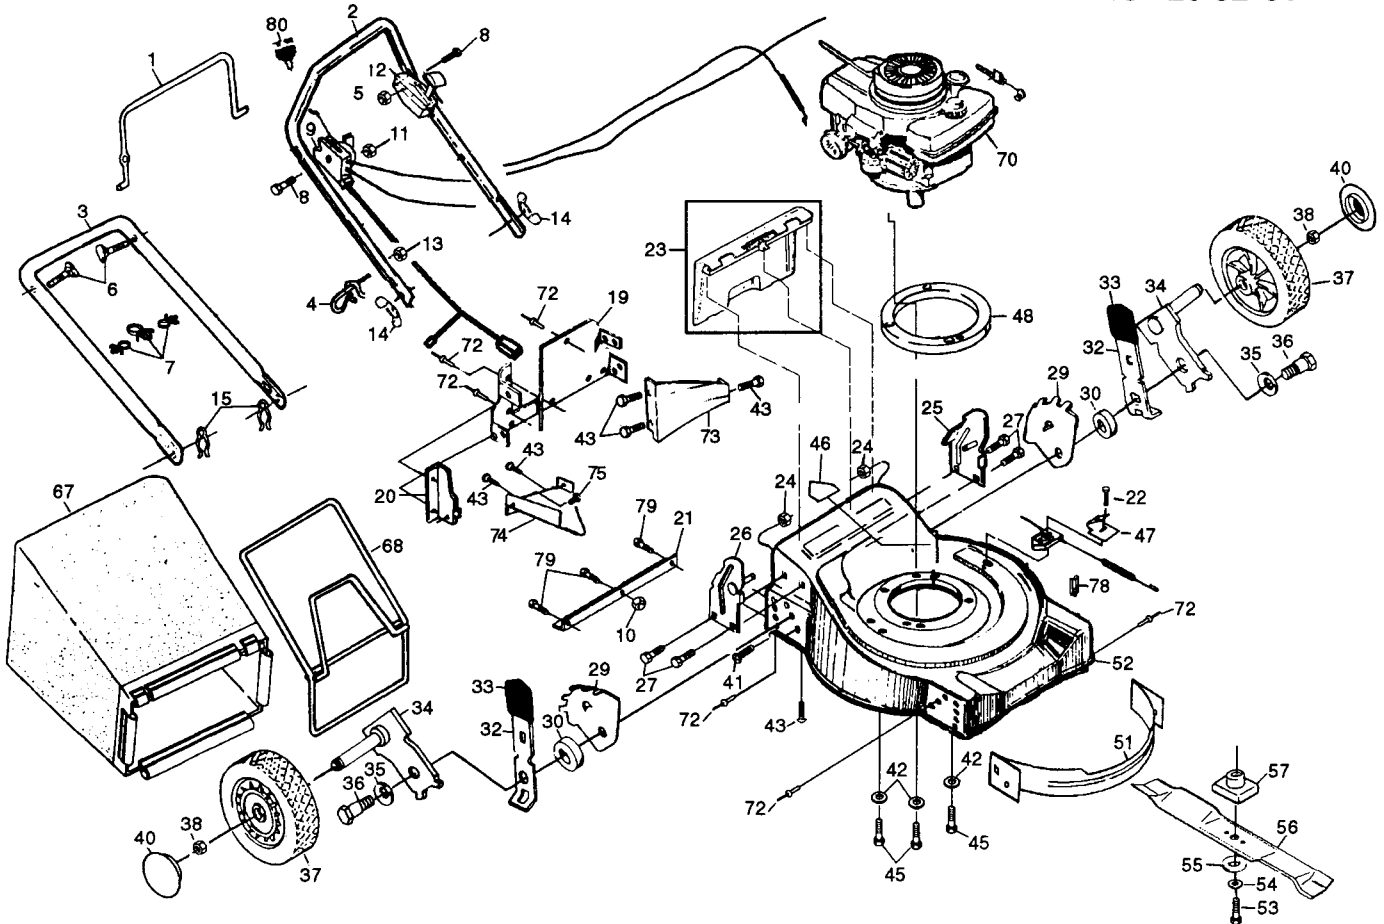

\*These parts must be purchased through an authorized Tecumseh dealer.

Ref. No.	Part.No.	Description
1	532 14 67-71	Control Bar
2	532 15 34-07	Upper Handle
3	532 15 34-06	Lower Handle
4	532 13 20-01	Rope Guide
5	873 68 04-00	Locknut 1/4-20
6	532 13 19-59	Handle Bolt
7	532 15 15-17	Cable Clips
8	532 14 49-29	Hex Washer Head Screw 1/4-20 x 2.12
9	532 14 70-42	Combination Control Key Start
10	873 68 04-00	Nut
11	873 68 04-00	Nut Hex Flange
12	532 14 73 22	Drive Control
13	873 68 04-00	Keys Locknut
14	532 12 86-38	Wing Nut
15	532 05 17-93	Hairpin Cotter
19	532 15 35-61	Back Plate
20	532 13 88-66	Side Baffle
21	532 14 76-25	Foot Guard
22	532 08 57-68	Self-Tapping Screw #10-24 x 3/4
23	532 14 76-13	Rear Door Assembly Kit
24	873 68 06-00	Locknut 3/8-16
25	532 15 34-05	Handle Bracket Assembly (Left)
26	532 15 34-04	Handle Bracket Assembly (Right)
27	532 15 00-78	Screw 5/16-18 x 3/4
29	532 13 99-01	Wheel Adjusting Bracket
30	532 14 66-30	Spacer
32	532 14 17-30	Selector Spring
33	532 08 78-77	Selector Knob
34	532 14 98-57	Axle Arm Assembly
35	532 00 23-35	Belleville Washer
36	532 14 27 48	Shoulder Bolt 3/8-16
37	532 14 84-40	Wheel & Tire Assembly
38	532 08 39-23	Locknut
40	532 07 74-00	Hubcap

Ref. No.	Part.No.	Description
42	532 05 39-98	Flat Washer
43	532 05 45-83	Hex Tapping Screw 1/4-20 x 1/2
45	532 85 09-99	Hex Head Thread Rolling Screw 3/8-16 x 1
47	532 08 86-15	Bracket Cover
48	532 85 09-88	Engine Spacer
51	532 14 14-78	Front Baffle
52	532 15 32-48	Housing Assembly (Incl. Ref. #46)
53	532 85 10-84	Hex Head Bolt 3/8-24 x 1-3/8 Grd. 8
54	532 85 02-63	Helical Lock Washer
55	532 85 10-74	Hardened Washer
56	531 02 01-34	20" Blade
57	532 85 15-14	Blade Adapter
67	532 14 98-67	Grass Bag
68	532 14 95-55	Catcher Frame
70	-----	Engine - Tecumseh Model No. TVS90-46043B
72	532 12 84-15	Pop Rivet
73	532 12 50-35	Rear Baffle
74	532 12 53-78	Baffle, Discharge
75	532 15 00-50	Screw, Hex Hd #10
78	532 14 56-69	Cable Guide
79	532 14 66-94	Screw
80	516 84 46-00	Key Generic
--	532 14 91-73	Muffler Guard (not shown)
--	532 85 18-56	Screw (not shown)

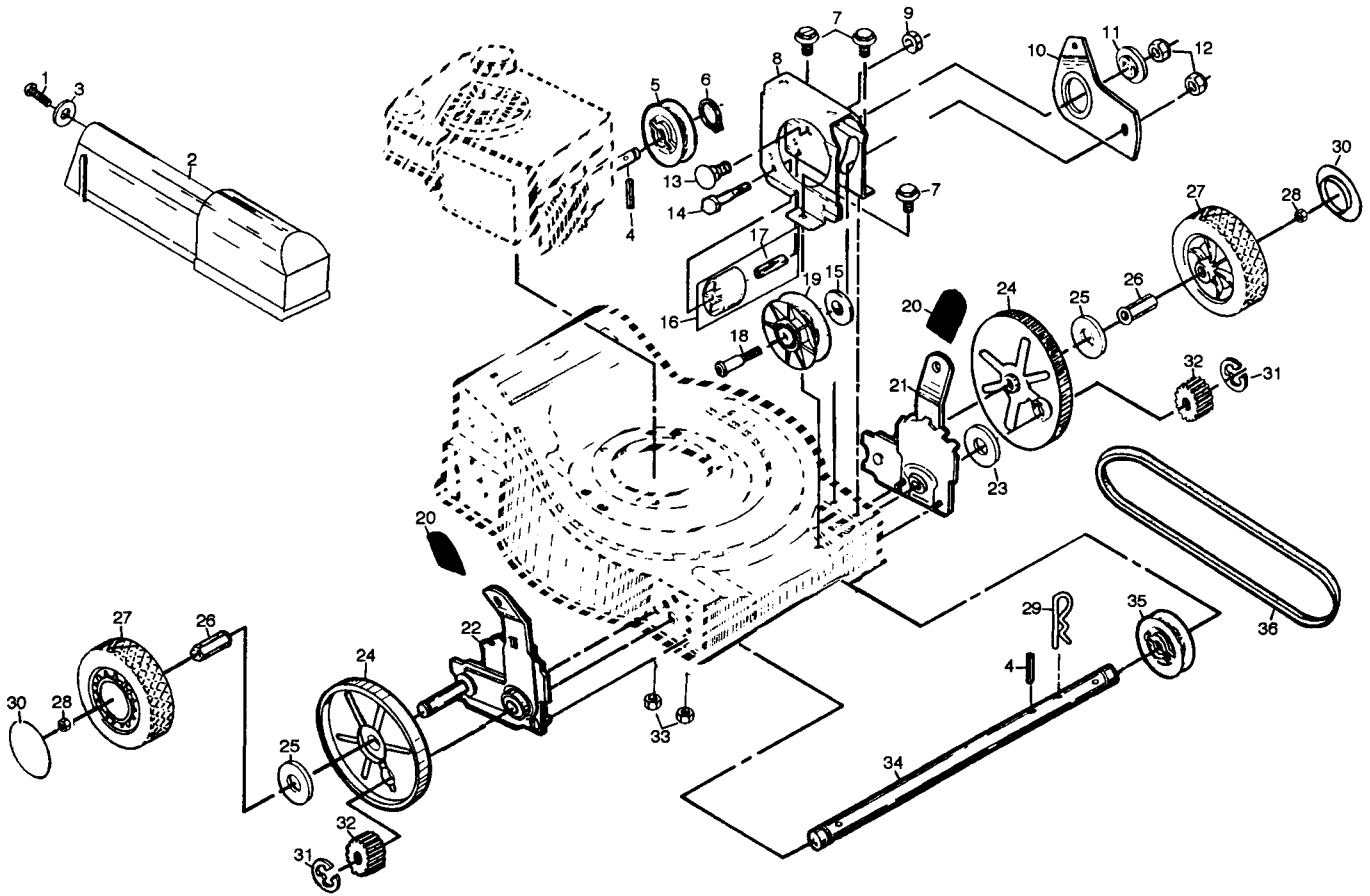

Ref. No.	Part.No.	Description
1	817 02 10-08	Hex Washer Head Screw #10-24 x 1/2
2	532 75 07-27	Drive Cover
3	532 00 48-02	Washer
4	532 85 19-80	Drive Pawl
5	532 08 80-43	Drive Pulley
6	812 00 00-30	Retaining Ring
7	532 05 45-83	Screw 1/4-20 x 1/2
8	532 12 52-46	Clutch Frame
9	532 05 09-62	Locknut 1/4-20
10	532 14 14-29	Clutch Lever
11	532 08 80-67	Clutch Lever Spacer
12	873 68 05-00	Locknut 5/16-18
13	872 07 05-04	Carriage Bolt 5/16-18 x 1/2
14	874 35 04-24	Hex Head Screw 1/4-20 x 1-1/2
15	532 08 80-69	Spacer
16	532 04 81-80	Idler Assembly (Includes Key No. 17)
17	532 08 85-76	Idler Spacer
18	532 08 85-17	Shoulder Bolt 5/16-18 x 1-3/8

Ref. No.	Part.No.	Description
19	532 08 85-16	Idler Pulley
20	532 08 78-77	Selector Knob
21	532 15 20-18	Selector Assembly (Left)
22	532 15 20-19	Selector Assembly (Right)
24	532 08 80-80	Dust Cover
25	532 06 77-25	Washer
26	532 08 84-46	Wheel Bushing
27	532 85 06-90	Wheel & Tire Assembly
28	532 14 52-12	Locknut
29	532 08 51-79	Retainer Clip
30	532 07 74-00	Hubcap
31	812 00 00-58	E-Ring
32	532 13 70-54	Pinion
33	873 68 04-00	Locknut 1/4-20
34	532 70 05-37	Drive Shaft
35	532 08 80-82	Driven Pulley
36	532 85 00-53	Drive Belt