

ILLUSTRATED PARTS BREAKDOWN


HUSQVARNA
13.0 HP LAWN TRACTOR
MODEL NO. YT130 (HEYT130H)
954 15 00-04



REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

ELECTRICAL

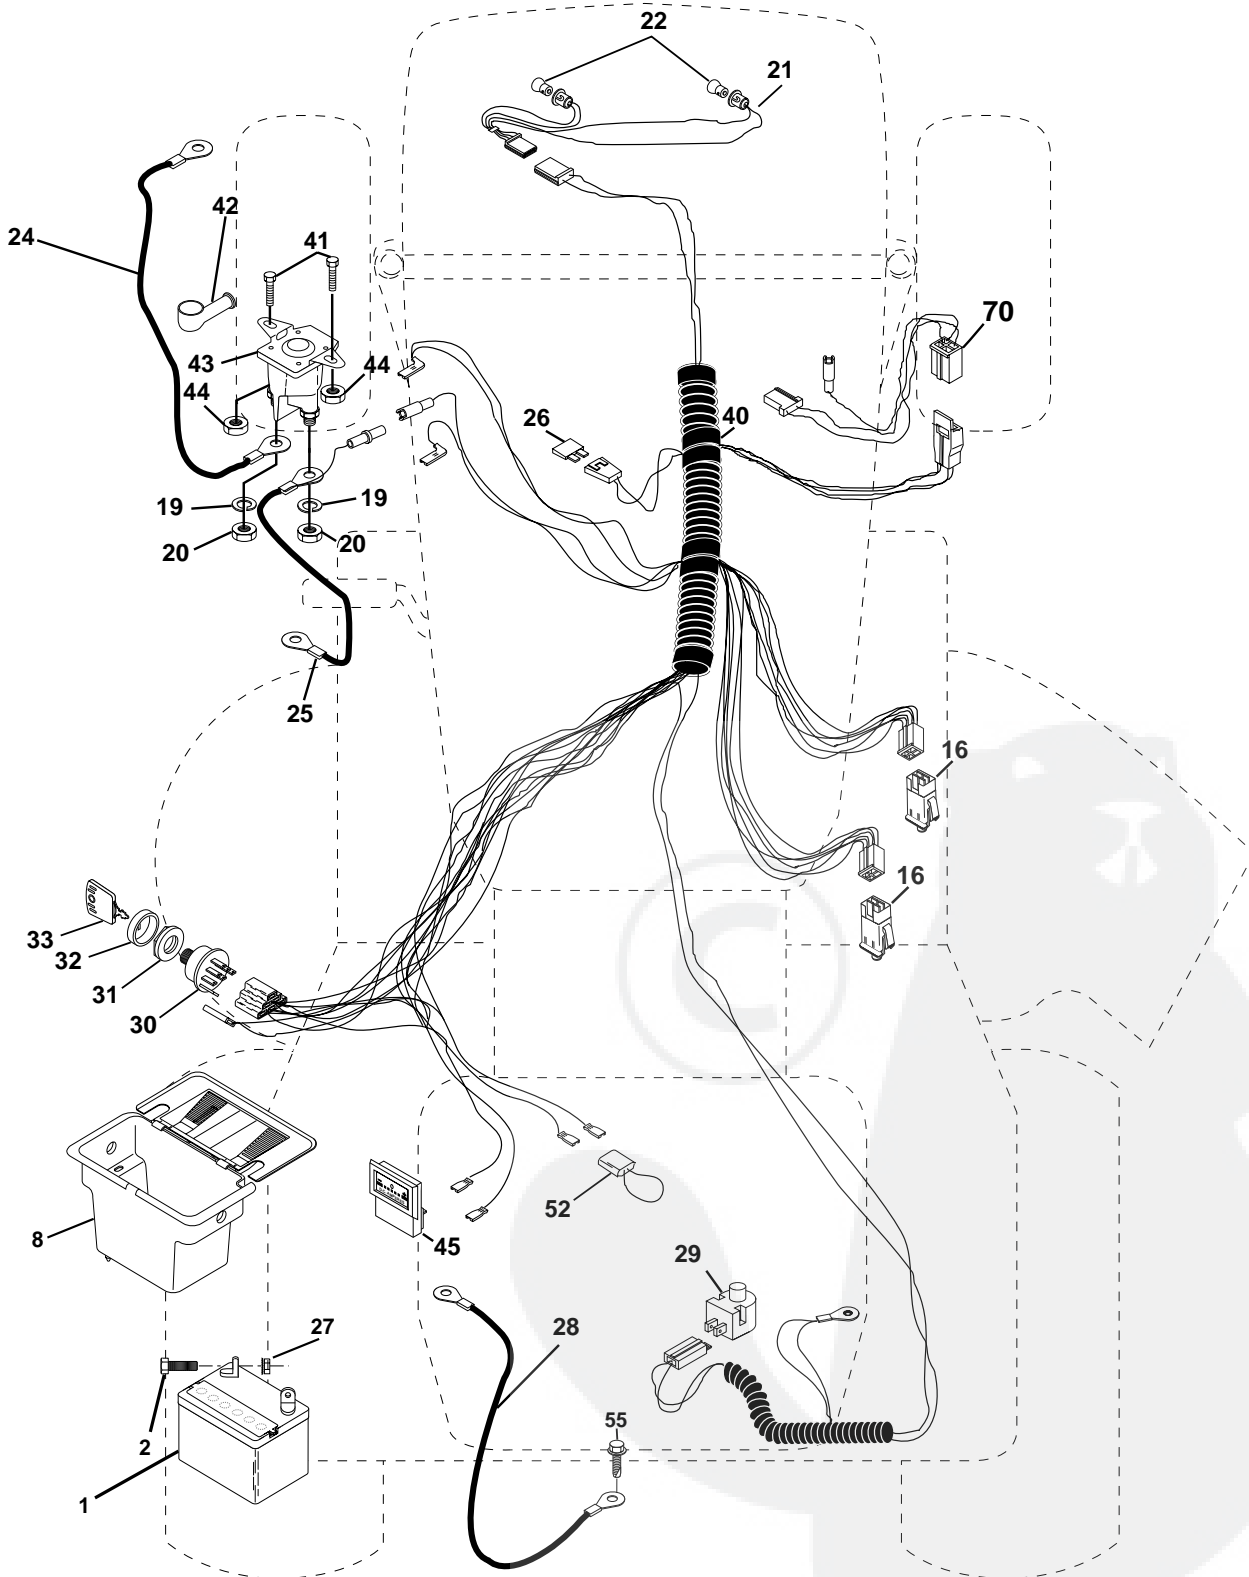

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532144925	Battery 12 Volt 25 AMP
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
8	532156417	Case Battery Mech Hinge
16	532153664	Switch Interlock Push-In
19	810090400	Washer Lock 1/4
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532166181	Harness Asm Light W/4152j
22	532004152	Bulb Light #1156
24	532004799	Cable Battery 6 Ga 11" red
25	532146147	Cable Battery 6 Ga 44" red w/16 wire
26	532166180	Fuse 30 AMP Auto Green
27	873510400	Nut Keps Hex 1/4-20 Unc
28	532124773	Cable Ground 6 Ga 12" black
29	532121305	Switch Plunger Nc Gray
30	532140301	Switch Ign 4 pos w/lights
31	532124211	Nut Ignition
32	532141226	Cover Sw Ignition
33	532122147	Key Ign Modelled Generic
40	532166145	Harness Ign.
41	871110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532131563	Cover Terminal Red
43	532145673	Solenoid
44	873640400	Nut Keps Hex 1/4-20 Unc
45	532121433	Ammeter Rectangular 6 Amp
52	532141940	Protection Wire Loop
70	532166658	Harness, Eng. B&S/Tec Dual

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.



REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04
CHASSIS AND ENCLOSURES

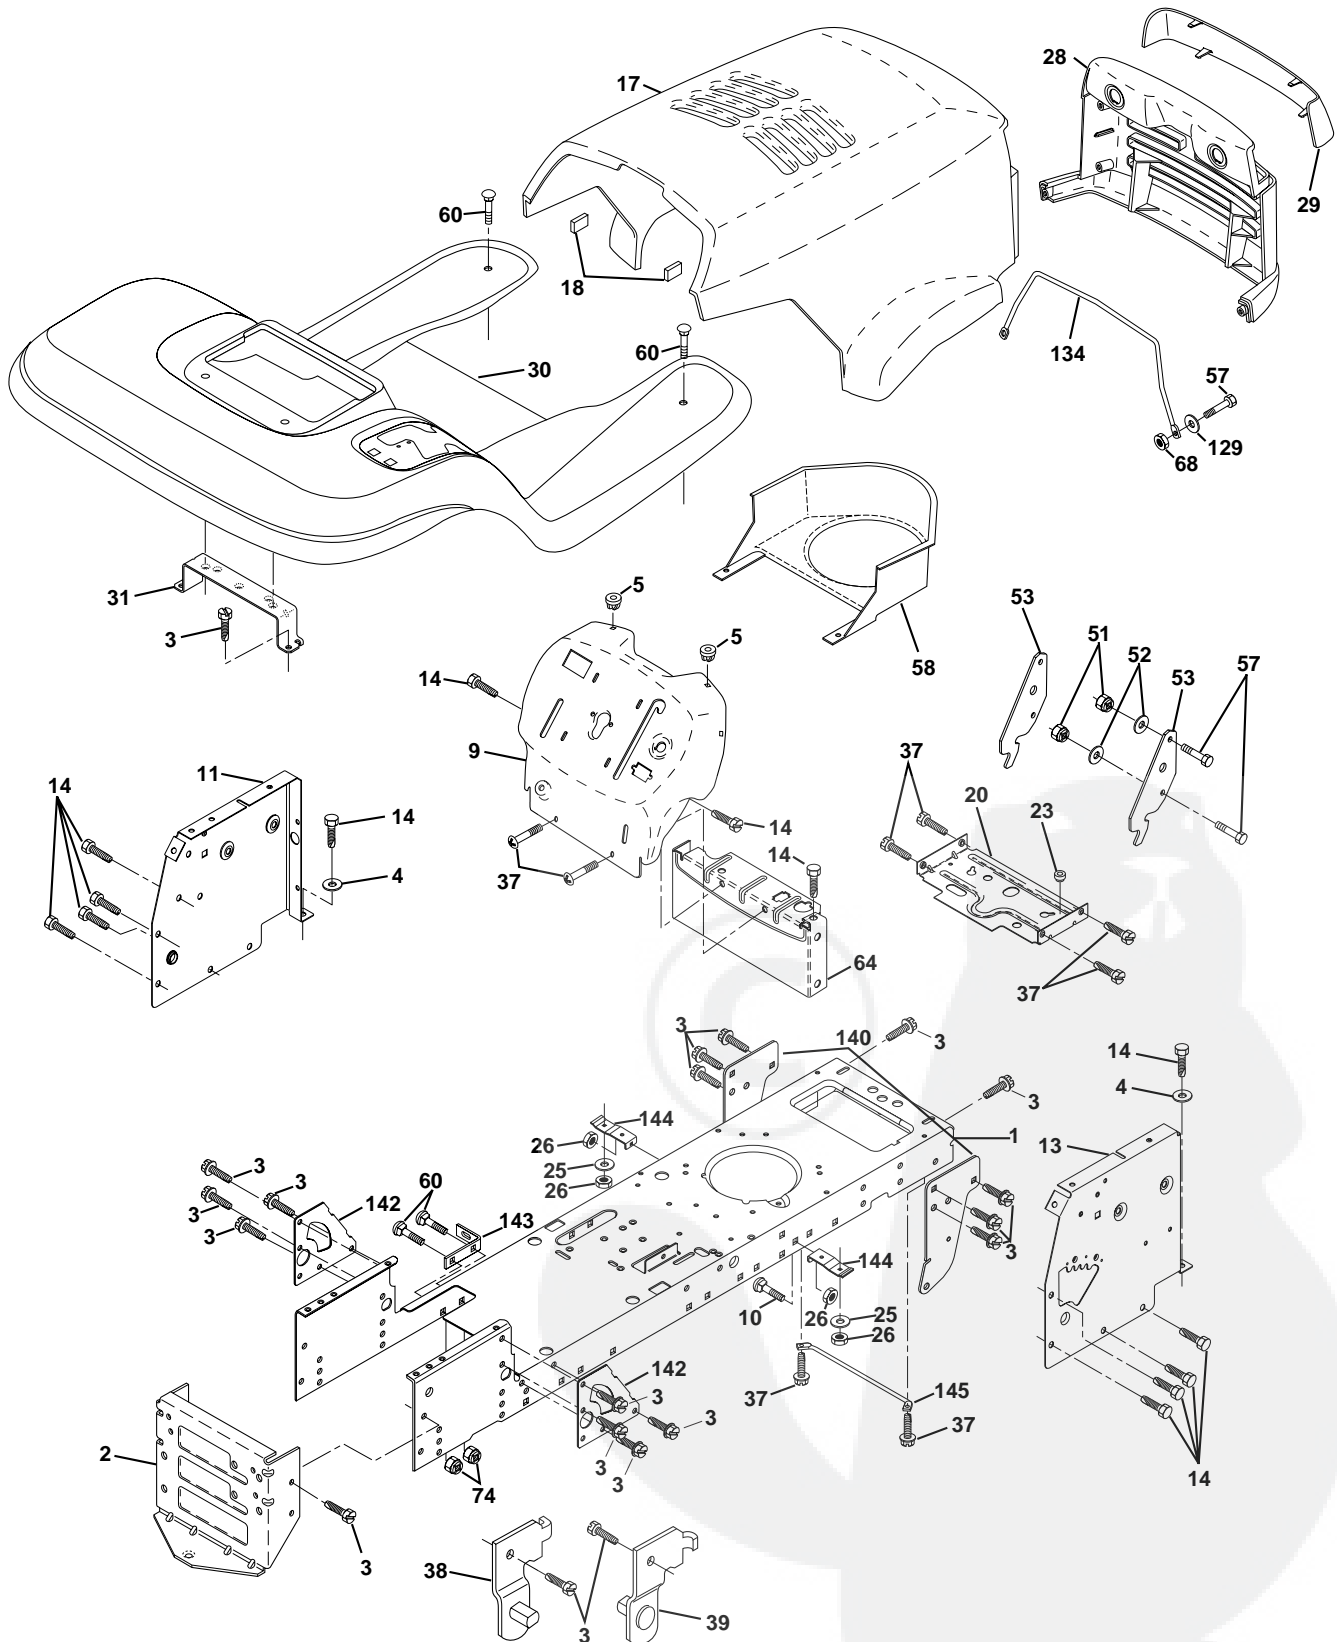

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	532166819	Chassis Stamping
2	532140356	Drawbar, Stretch
3	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
4	819131216	Washer 13/32 x 3/4 x 16 Ga.
5	532155272	Bumper Hood/Dash
9	532163677	Dash P/L
10	872140608	Bolt Carriage 3/8-16 x 1
11	532155927	Panel Dash Lh
13	532157262	Panel Dash Rh
14	817490608	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532156051	Hood LT/PL Husqvarna
18	532126938	Bumper Hood
20	532156437	Plate Mtg Battery Fuel Tank Fr
23	532124028	Bushing
25	819131312	Washer 13/32 X 13/16 X 12 Ga
26	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
28	532156880	Grille LT/PL Husqvarna
29	532149777	Lens LT/PL Husqvarna
30	532151287	Fender Footrest STLT Pnt
31	532139976	Bracket Support Fender
37	817490508	Screw Thdrol 6/16-18 x 1/2 TYT
38	532139886	Bracket, Asm. Pivot, L.H., Mower Rear
39	532139887	Bracket, Asm. Pivot, R.H., Mower Rear
51	873800400	Nut Lock Hex W/Ins 1/4-20
52	819091416	Washer 9/32 x 7/8 x 16 Ga.
53	532150067	Bracket Pnt. Pick off LT/PL Husqvarna
57	874780412	Bolt Hex 1/4-20 x 3/4
58	532150127	Air Duct Engine P/L
60	872140606	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532154798	Dash Lower STLT
68	873510400	Nut keps Hex 1/4-20 unc
74	873680600	Nut Crownlock 3/8-16 UNC
129	819091016	Washer 9/32 x 5/8 x 16 Ga.
134	532160219	Rod Support Hood LT/PL Husq.
140	532158418	Bracket Suspension Front 7 Ga.
142	532165867	Plate Reinforcement STLT
143	532154966	Bracket Swaybar Chassis
144	532154207	Bracket Pnt Footrest STLT
145	532156524	Rod Pivot Chassis/Hood
--	532005479	Plug Button


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm



REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

DRIVE

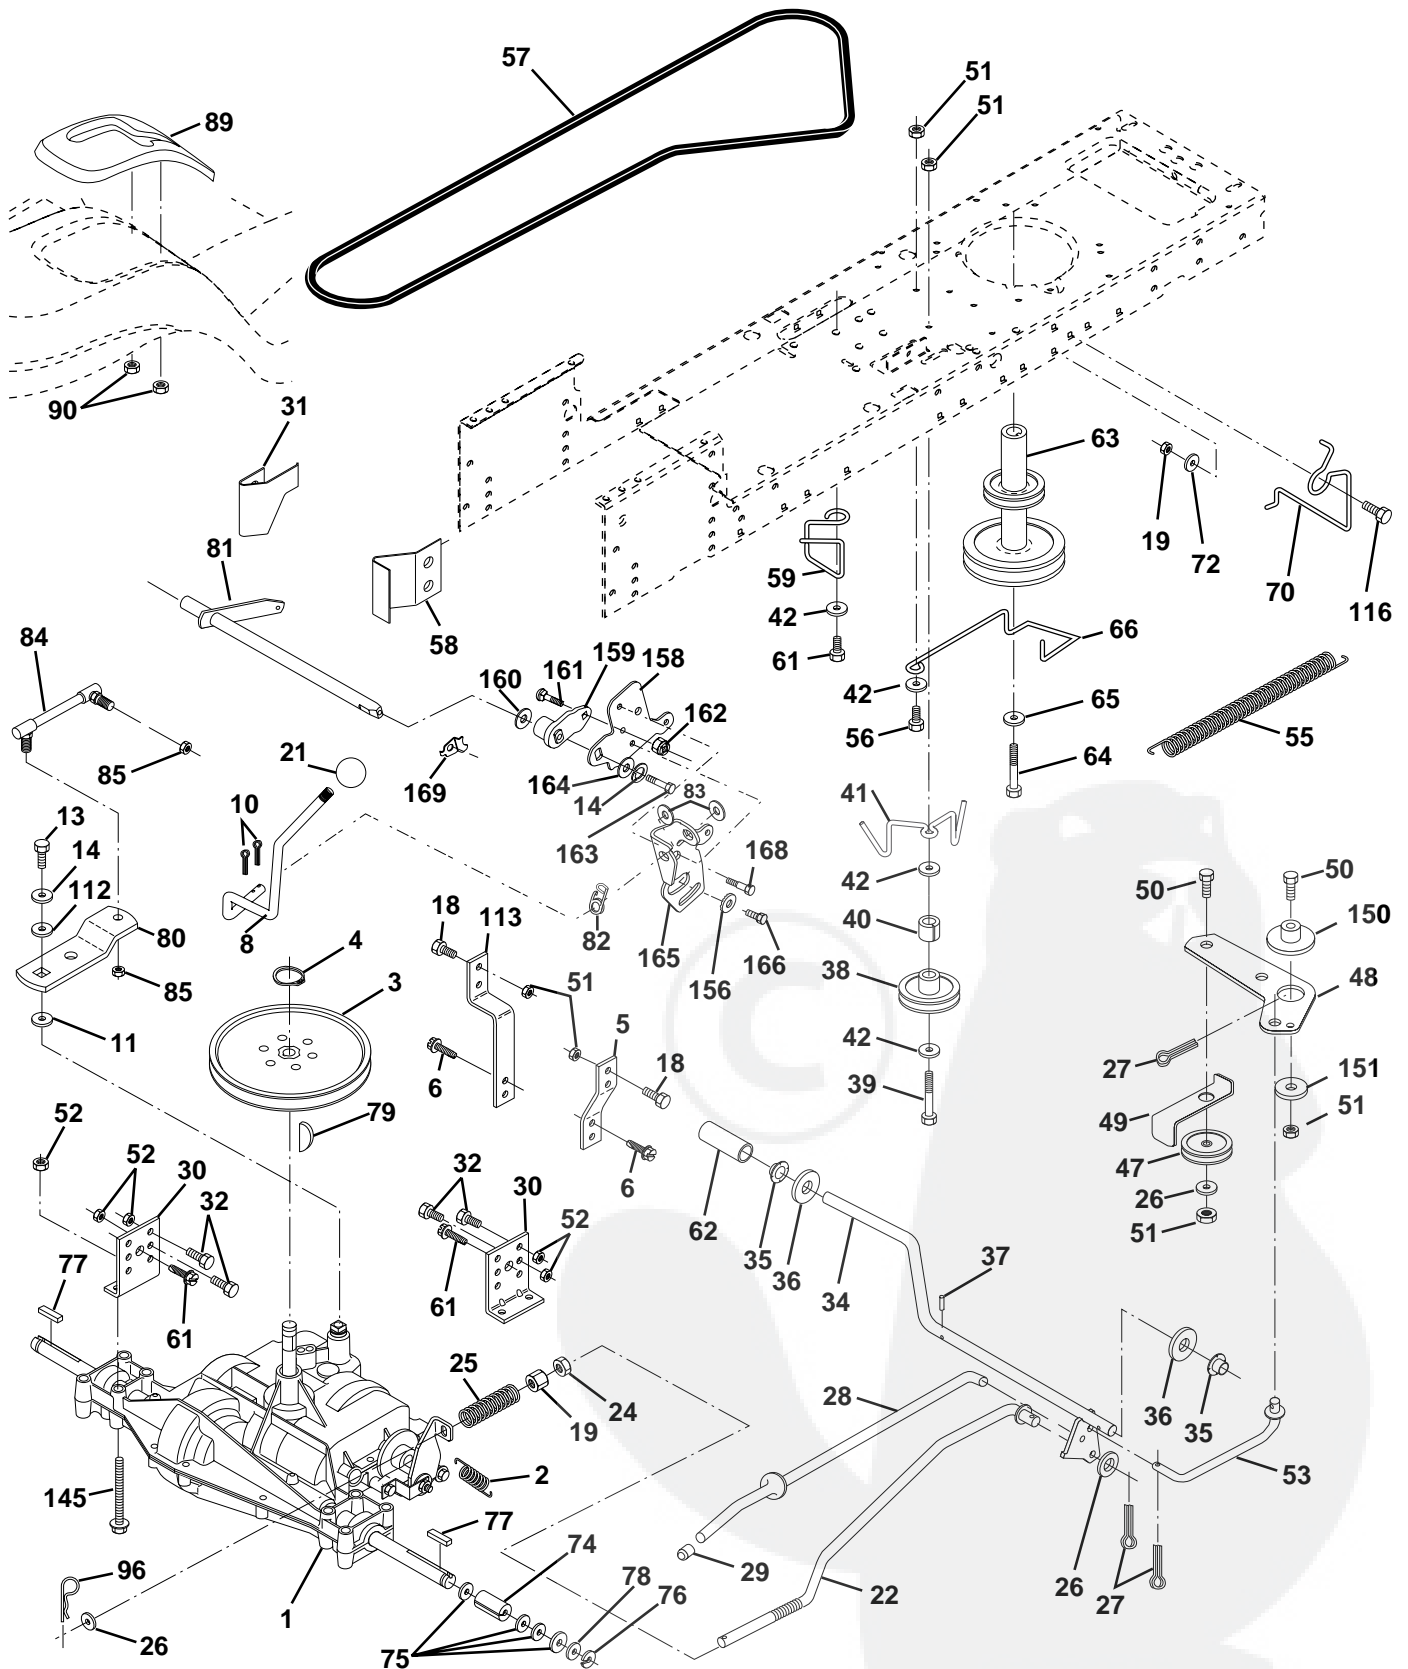

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

DRIVE


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	----- Transaxle (Order Parts From Engine Manufacturer) Peerless 205-545C	58	532127274 Keeper Belt RH LT Pnt/zinc 16g
2	532146682 Spring Return Brake T/a Zinc	59	532140312 Keeper Belt Span Ctr
3	532123666 Pulley Transaxle 18" tires	61	817490612 Screw Thdrol 3/8-16x3/4 Ty-tt
4	812000028 Ring Retainer # 5100-62	62	532123533 Cover Pedal Deluxe
5	532121520 Strap Torque 30 Degrees	63	532140186 Engine Pulley LT/YT
6	817490512 Screw Thdrol 5/16-18 X 3/4 TYT	64	871170764 Bolt Hex
8	532165866 Rod Shift Fender Adjust STLT	65	810040700 Washer Lock Hvy Hlcl Spr 7/16
10	876020416 Pin Cotter 1/8 X 1 Cad	66	532154778 Keeper Belt Engine Foolproof
11	532105701 Washer Plate Shf 388 Sq Hole	70	532134683 Guide Belt Mower Drive RH
13	874550412 Bolt 1/4-28 Unf Gr 8 W/Patch	72	819132012 Washer 13/32 X 1-1/4 X 12 Ga
14	810040400 Washer Lock Hvy Helical 1/4	74	532137057 Spacer Axle
18	874780616 Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5	75	532121749 Washer 25/32 X 1 1/4 X 16 Ga
19	873800600 Nut Lock 3/8-16 Unc	76	812000001 E-ring #5133-75
21	532121274 Knob	77	532123583 Key Square 2 0 X 1845/ 1865
22	532130804 Rod Brake Blk Zinc 26 840	78	532121748 Washer 25/32 X 1-5/8 X 16 Ga
24	873350600 Nut Hex Jam 3/8-16 Unc	79	532125096 Key Woodruff #9 3/16 x 3/4
25	532106888 Spring Rod Brake 2 00 Zinc	80	532131486 Arm Shift
26	819131316 Washer 13/32 X 13/16 X 16 Ga	81	532165594 Shaft Asm Cross Tapered DA/PR 18"
27	876020412 Pin Cotter 1/8 X 3/4 Cad	82	532165711 Spring Torsion T/a
28	532145204 Rod Brake Parking LT/YT	83	819171216 Washer 17/32 X 3/4 X 16 Ga
29	532071673 Cap Brake Parking Black	84	532166228 Transaxle Link
30	532130807 Bracket Mtg Transaxle	85	532150360 Nut Lock Center 1/4 - 28 FNTHD
31	532127275 Keeper Belt LH LT 14 Ga	89	532158391 Console Shift STLT
32	874760512 Bolt Hex Hd 5/16-18unc X 3/4	90	532124346 Nut Self-thd Wsh-hd 1/4 Zinc
34	532155071 Shaft Asm Pedal Foot	96	532124788 Retainer Spring 1"
35	532120183 Bearing Nylon Blk 629 Id	112	819091210 Washer 9/32 x 3/4 x 10 Ga.
36	819211616 Washer 21/32 X 1 X 16 Ga	113	532127285 Strap Torque LT
37	532124963 Pin Roll 3/16 X 1"	116	872110610 Bolt Rdhd Sq Neck 3/8-16 x 1.25
38	532131494 Pulley Idler Flat	145	874490540 Bolt Hex Flg Hd 5/16-18 Gr 5
39	874760644 Bolt Fin Hex 3/8-16unc X 2-3/4	150	532165850 Bushing Bellcrank
40	532124965 Spacer Split 395 X 59 Bzp	151	819133210 Washer 13/32 x 2 x 10 Ga.
41	532165838 Keeper Belt Idler Flat	156	532166002 Washer Srted 5/16ID x 1.125
42	819131312 Washer 13/32 X 13/16 X 12 Ga	158	532165589 Bracket Shift Mount
47	532127783 Pulley Idler V Groove Plastic	159	532165494 Hub Tapered Flange Shift Lt
48	532154407 Bellcrank Clutch Grnd Drv Stl	160	819292016 Washer 29/32 x 1-1/4 x 16 Ga
49	532123205 Retainer Belt Style Spring	161	872140406 Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
50	874760624 Bolt Hex Hd 3/8-16unc X 1-1/2	162	873680400 Nut Crownlock 1/4-20 Unc
51	873680600 Nut Crownlock 3/8-16 Unc	163	874780416 Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
52	873680500 Nut Crownlock 5/16-18 Unc	164	819091010 Washer 5/8 x .281 x 10 Ga
53	532105710 Link Clutch	165	532165623 Bracket Pivot Lever
55	532105709 Spring Return Clutch 6 75	166	532166880 Screw 5/16-18 x 5/8
56	874760620 Bolt Fin Hx 3/8-16 X 1/4	168	532165492 Bolt Shoulder 5/16-18 x .561
57	532130801 V-Belt Ground Drive 95 25	169	532165580 Plate Fastening STLT/CRD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

STEERING ASSEMBLY

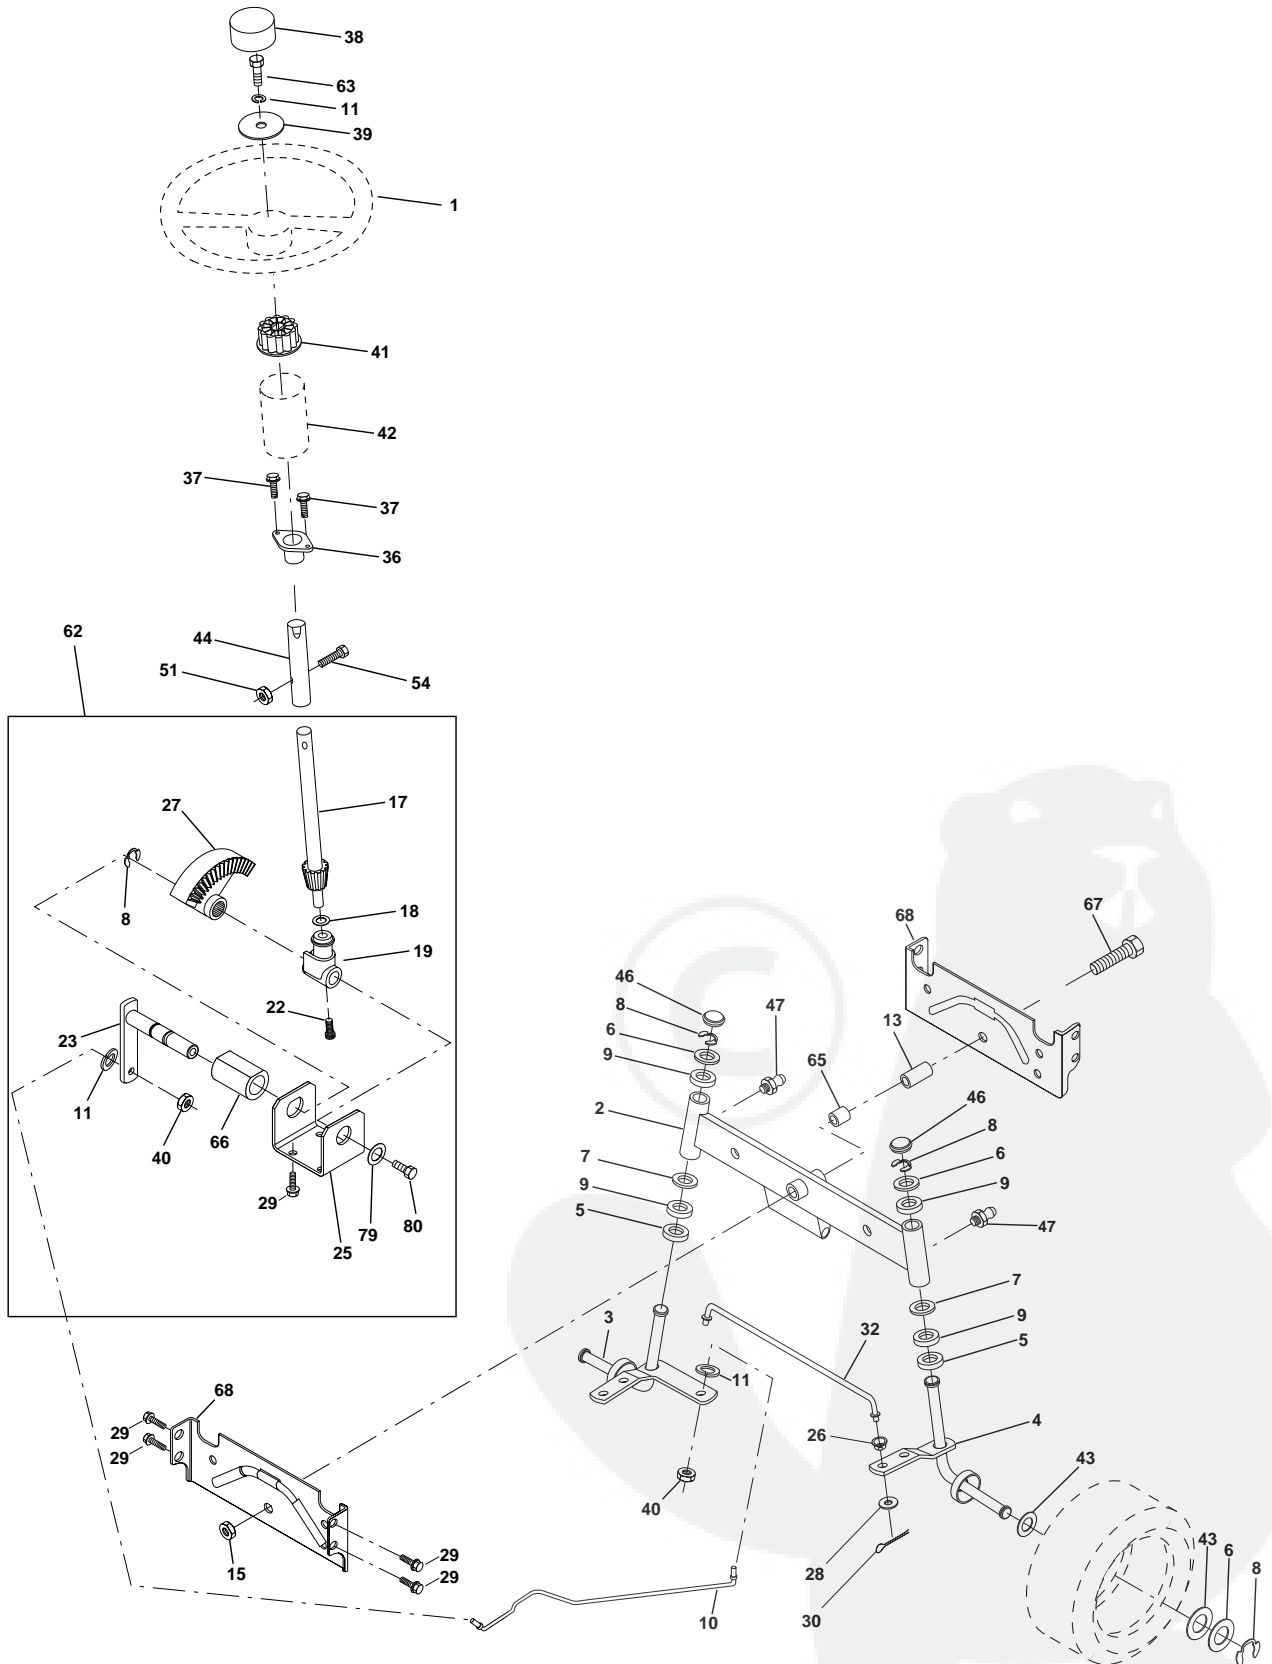

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04


STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	532124415	Wheel Steering
2	532154427	Axle Asm STMP Dropped STL
3	532156483	Spindle Asm LH
4	532157473	Spindle Asm RH
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 X 1-1/4 X 16 Ga
8	812000029	Ring Klip #t5304-75
9	532124937	Bearing Col Strg Blk
10	532156438	Link Drag Extended Stamp
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
13	532154779	Bearing Axle STL/GT
15	873901000	Nut Lock Flange 5/8-11 Unc
17	532156546	Shaft Asm Strg
18	532057079	Washer Thrust 515x 750x 033
19	532160395	Support Shaft
22	532165857	Screw Hex
23	532165851	Shaft Asm Pittman
25	532154406	Bracket Steering
26	532126847	Bushing Link Drag Blk LR
27	532136874	Gear Sector
28	819131416	Washer 13/32 X 7/8 X 16 Ga
29	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30	876020412	Pin Cotter 1/8 X 3/4 Cad
32	532130465	Rod Tie Wire Form 19 75 Mech
36	532155099	Bushing Strg
37	532152927	Screw
38	532124416	Insert Cap Strg Wh Au
39	819133808	Washer 13/32 X 2-3/8 X 8 Ga
40	532124701	Lock nut
41	532100711	Adaptor Wheel Strg
42	532155092	Boot Steering Shaft
43	532121749	Washer 25/32 X 1 1/4 X 16 Ga
44	532153720	Extension Steering Shaft LR/LT
46	532121232	Cap Spindle Fr Top Blk
47	532124836	Fitting Grease
51	873800500	Nut Lock Hex w/Ins 5/16-18
54	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532156594	Kit, Steering Assembly Svc
63	874780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532154780	Spacer Axle
66	532154404	Bearing Arm Pittman
67	874781044	Bolt, Fin Hex 5/8-11 UNC x 2-3/4
68	532154429	Axle, Brace
79	819132012	Washer 13/32 x 1-1/4 x 12 Ga
80	874950612	Bolt Hex Nylon 3/8-16 x 3/4

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04
ENGINE

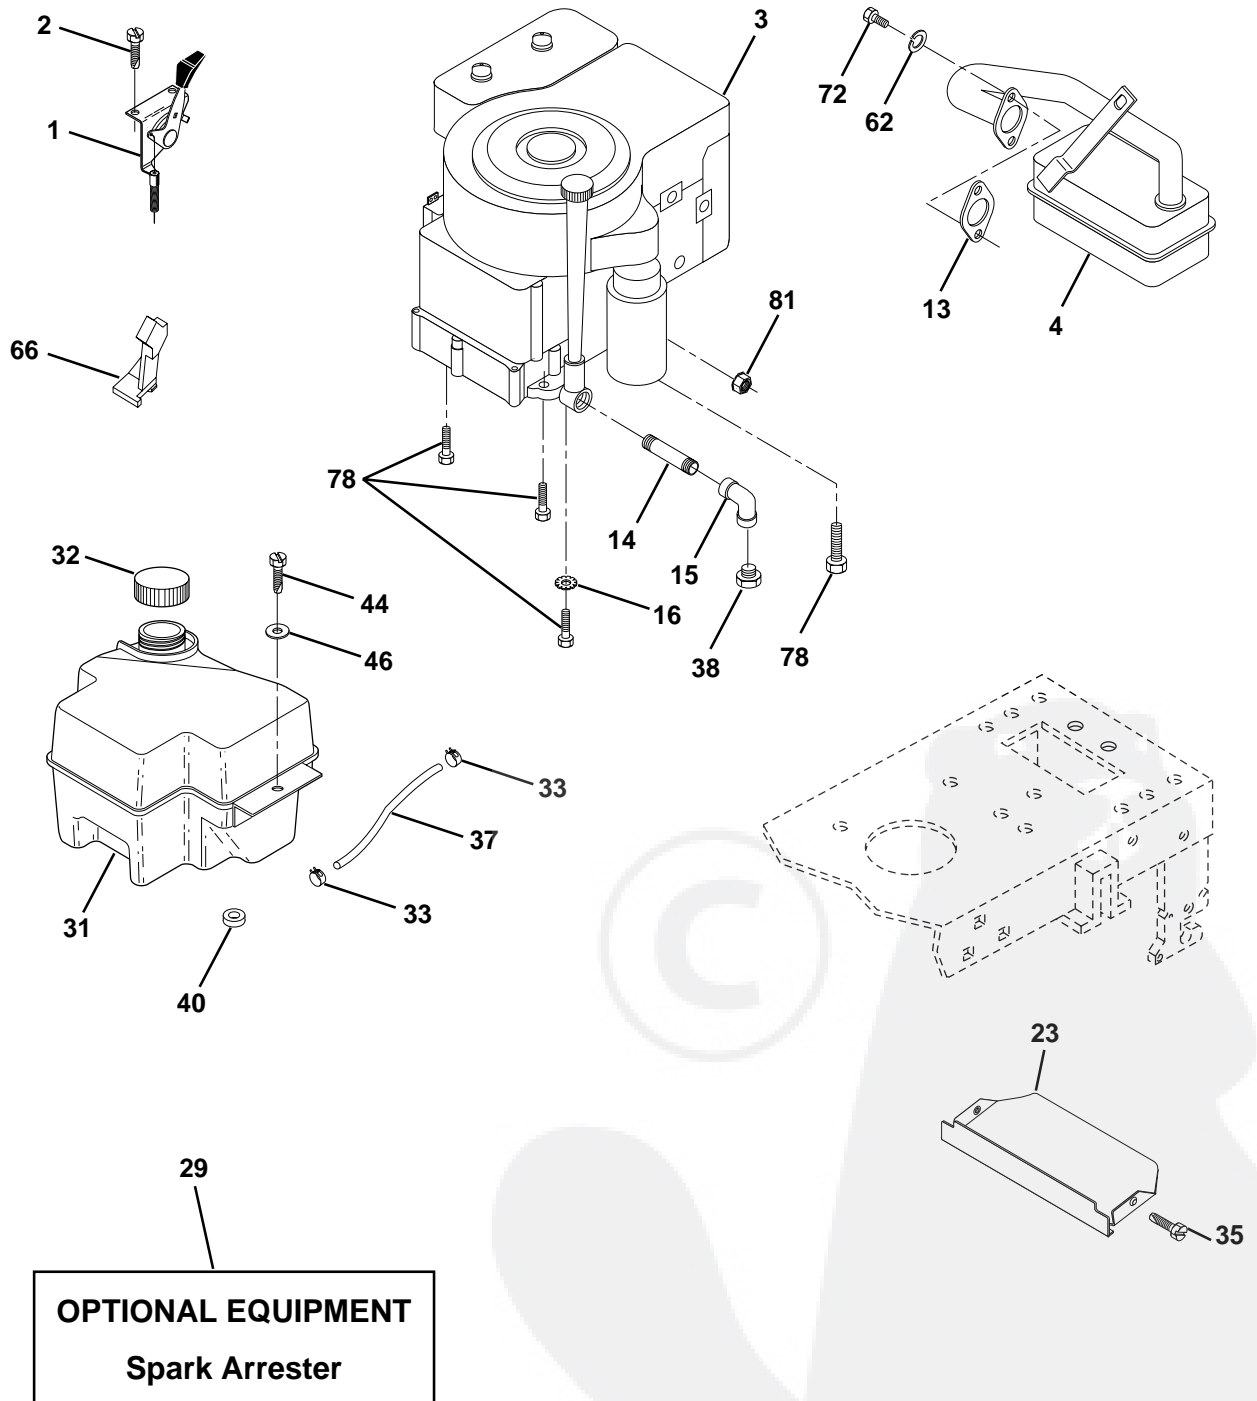

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	532141359	Control Th/ch 20.22 LH Flag
2	817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	-----	Engine B&S Model No. 28R707 (Order Parts From Engine Manufacturer)
4	532137348	Muffler LT B&S 12/12.5/13HP
13	532165291	Gasket Eng 1 313 Id Tin Plated
14	813280324	Nipple Pipe 3/8 Npt X 3"
15	813200300	Elbow Std 90 Degree 3/8-18 Npt
16	811050600	Washer Lock Ext Tooth 3/8
23	532159880	Shield Brn/Dbt Guard
29	532137180	Kit Spark Arrestor (Flat Scrn)
31	532161911	Tank Fuel Front 2 00
32	532140527	Cap Asm Fuel W/sym Vented
33	532123487	Clamp Hose Black
35	817490512	Screw
37	532137040	Line Fuel 20"
38	-----	Plug Oil Drain (Order From Engine Manufacturer)
40	532124028	Bushing Snap Nyl Blk Fuel Line
44	817490412	Screw Hexwsh Thdrol 1/4-20x3/4
46	819091416	Washer 9/32 X 7/8 X 16 Ga
62	810040500	Washer Lock Hvy Hlcl Spr 5/16
66	532127951	Stop Throttle 3000 RPM
72	871070512	Screw Hexhd Cap 5/16-18x 3/4
78	817490620	Screw Thdrol 3/8-16x1-1/4 TYTT
81	532128861	Nut Flange 1/4-20 Starter Nut


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm



REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

SEAT ASSEMBLY

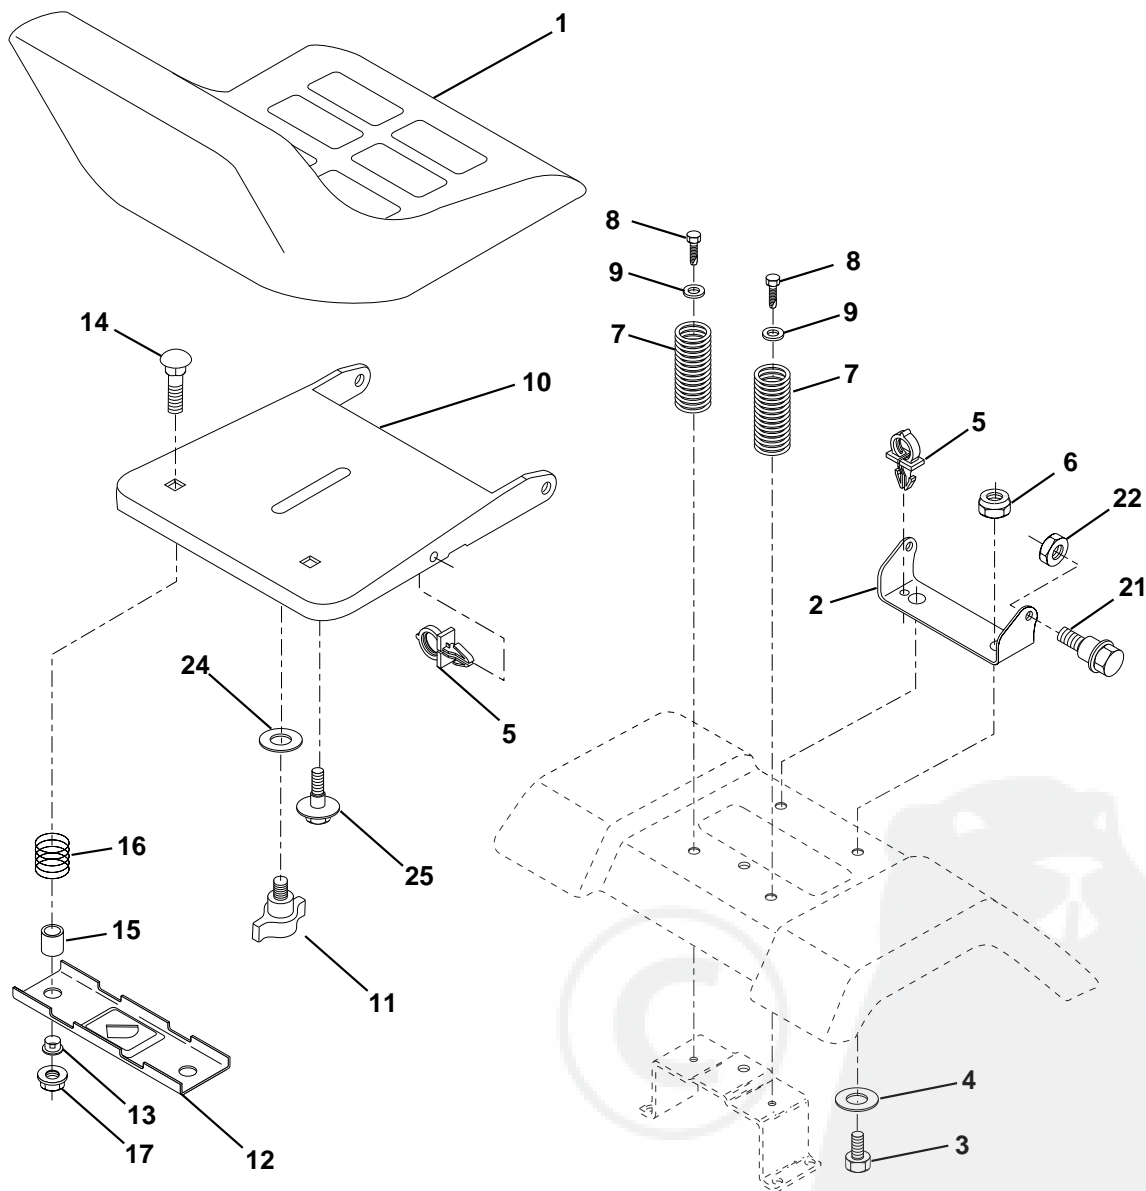

KEY PART NO. NO.

DESCRIPTION

1	532140839	Seat
2	532140551	Bracket Pivot Seat 8 720
3	874760616	Bolt Fin Hex 3/8-16unc X 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push-In
6	873800600	Nut Hex w/Ins. 3/8-16 Unc
7	532124181	Spring Seat Cprsn 2 250 Blk Zi
8	817490616	Screw Thdrol 3/8-16 X 1 Ty-tt
9	819131614	Washer 13/32 X 1 X 14 Ga.
10	532155925	Pan Seat
11	532166369	Knob Seat
12	532121246	Bracket Mounting Switch

KEY PART NO. NO.

DESCRIPTION


13	532121248	Bushing Snap Blk Nyl 50 Id
14	872050412	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532134300	Spacer Split 28x 96 Yel Zinc
16	532121250	Spring Cprsn 1 27 Blk Pnt
17	532123976	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	532153236	Bolt Shoulder 5/16-18 Unc
22	873800500	Nut Hex Lock W/Ins 5/16-18
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	532127018	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS


TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

DECALS

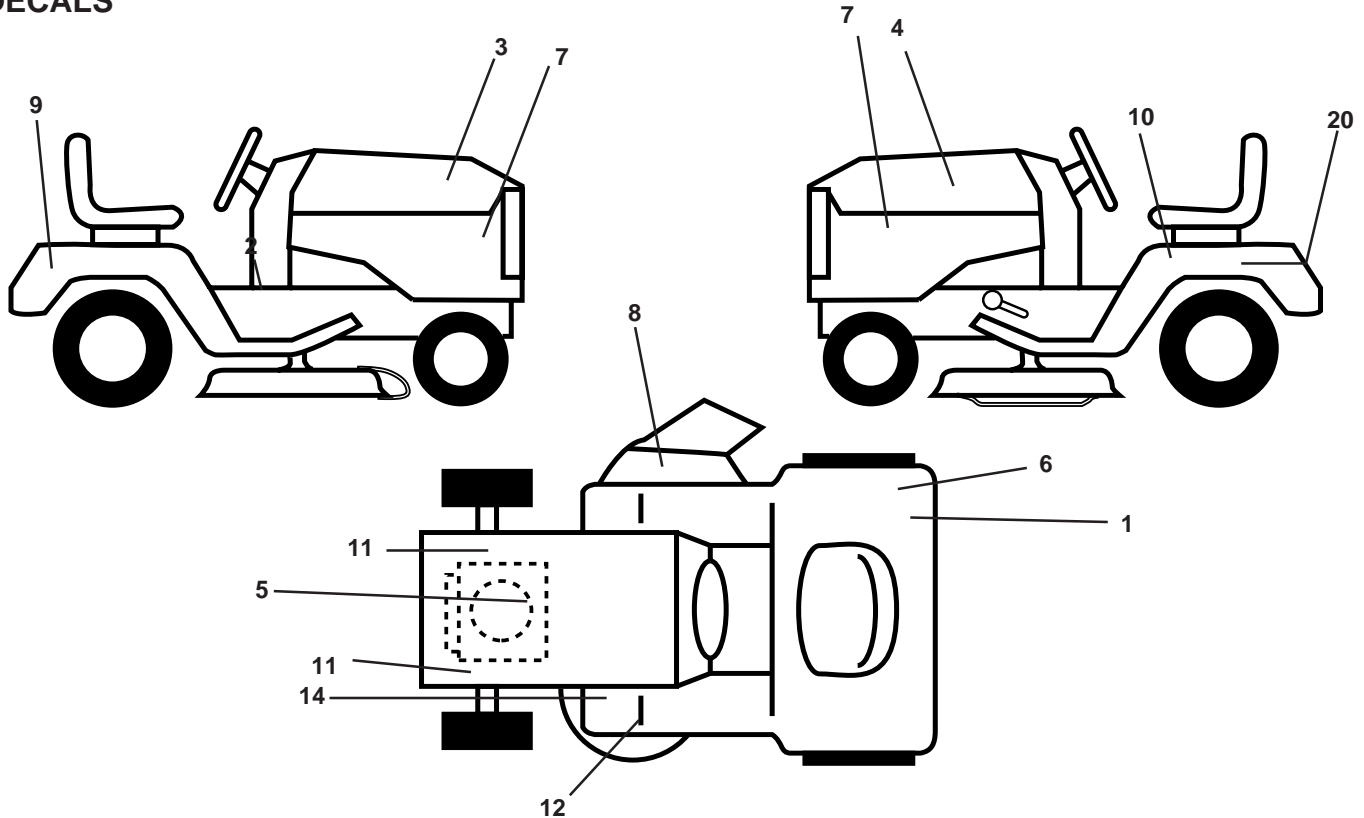

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532126187	Decal 100 DBA	14	532160396	Decal V-Belt Schematic
2	532140837	Decal Saddle Brake Parking	20	532145005	Decal Bat Dan/Psn
3	532151320	Decal Hood RH	--	532154515	Pad Footrest LH STLT
4	532151321	Decal Hood LH	--	532162598	Decal Drawbar
5	532165363	Decal HP Engine	--	532154516	Pad Footrest RH STLT
6	532145437	Decal Europe Stand CE	--	532138311	Decal Handle Lift Height Adjust
7	532159713	Decal Pnl Side	--	532156690	Manual Operator's (Euro.)
8	532145494	Decal Mower Cuttingfnger	--	532156691	Manual Operator's (Scan.)
9	532150617	Decal Fender Husq	Available accessories not included with tractor:		
10	532145498	Decal Read Owner's Manual Syms.	--	CE42	Grass Catcher
11	532159736	Decal Chassis Hot Muffler	--	Mk420	Mulch Kit w/Blades
12	532159737	Decal Brake/ Clutch Symbol Lt			

WHEELS & TIRES

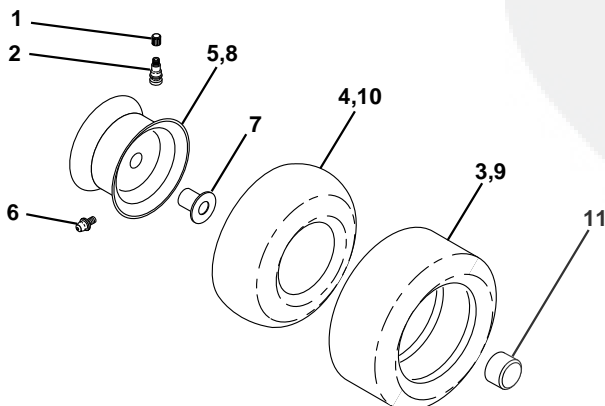


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 6 0 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532138336	Rim Asm 6"front Silver Service
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532138337	Rim Asm 8"rear Silver Service
9	532106268	Tire R Ts 18x9 5-8 C Service
10	532124926	Tube Rear (Service Item Only)
11	532104757	Cap Axle Blk 1 50 X 1 00
--	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

MOWER DECK

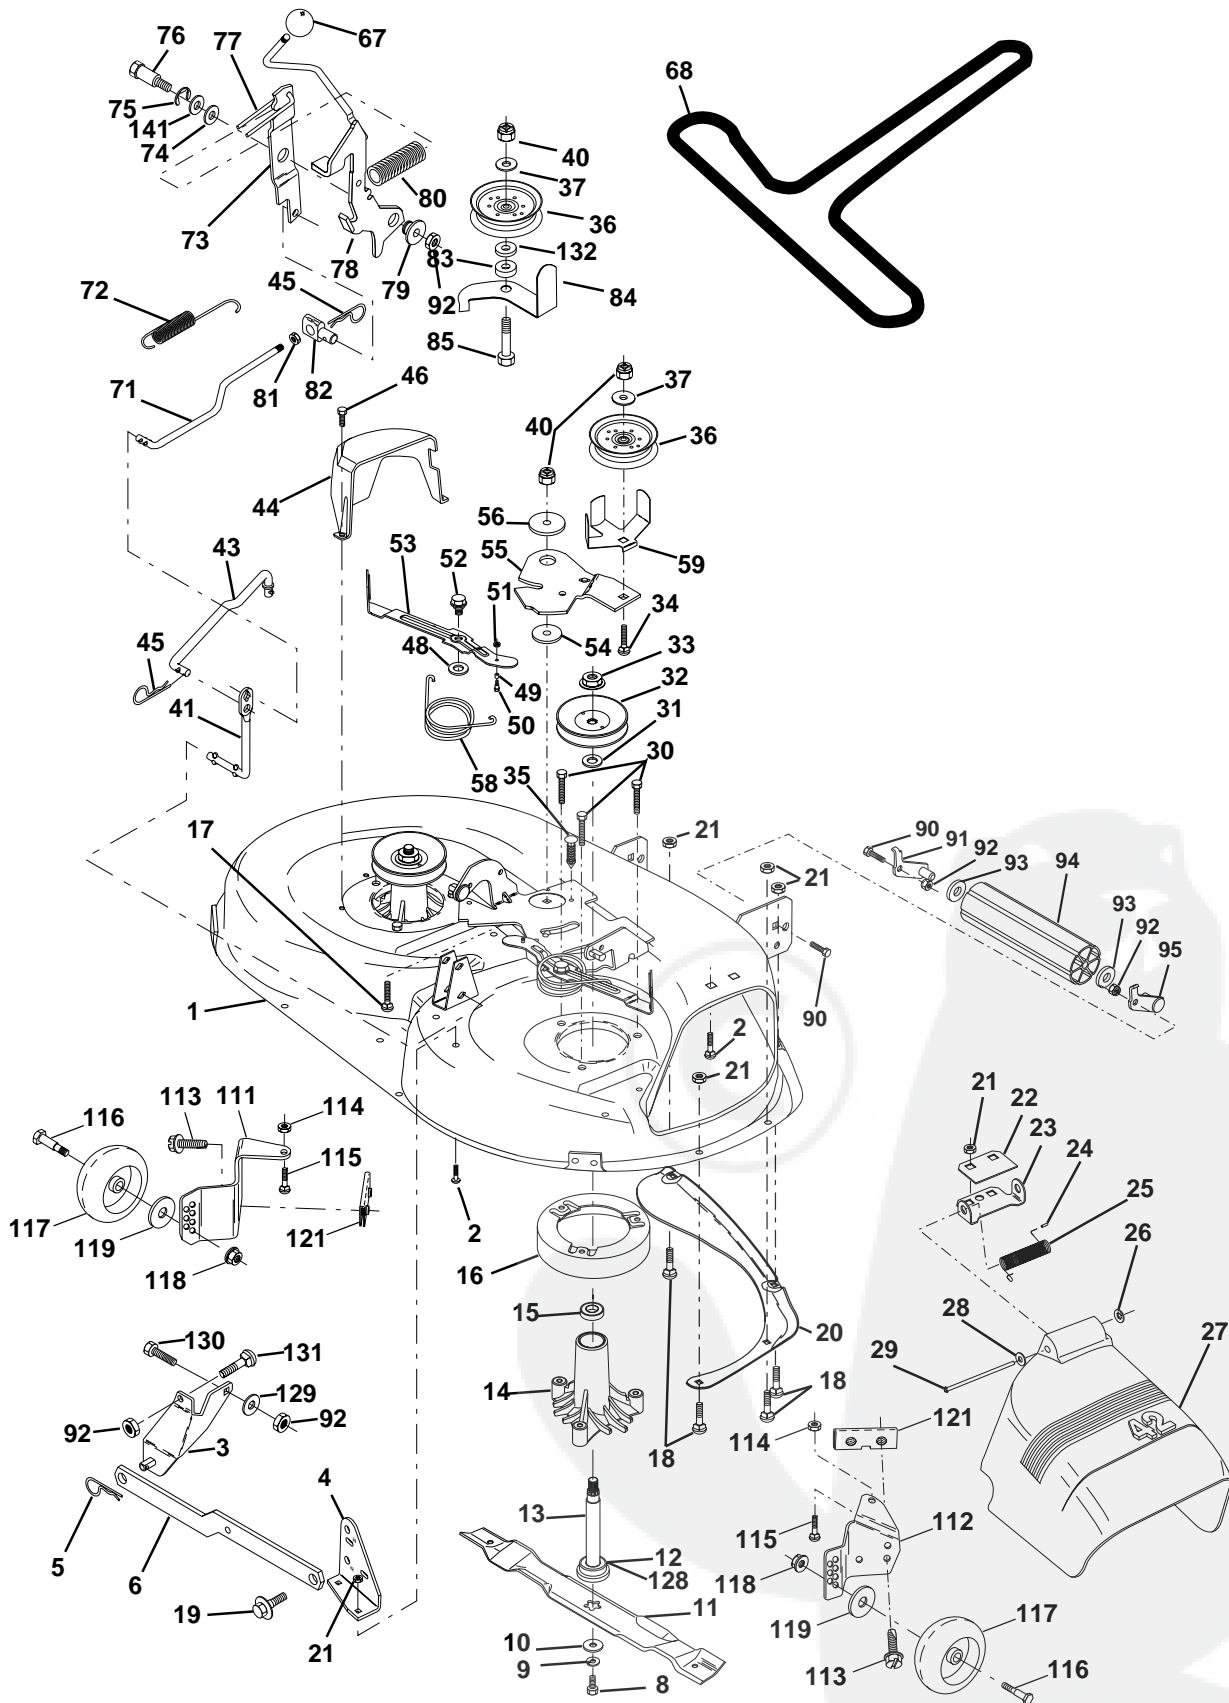

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532164961	Deck Asm MWR 42"weldment	58	532140086	Spring Torsion Brakes
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4	59	532141043	Guard TUV Idler
3	532138017	Bracket Asm Fr Sway Bar 38/42	67	532162132	Knob Rd 7/16-14 Plstc Thds Blk
4	532138440	Bracket Asm Deck 42"sway Bar	68	532144200	V-Belt Mower 42"
5	532124670	Retainer Spring	71	532142427	Rod Clutch Primary 38/42
6	532130832	Arm Suspension Rear	72	532131870	Spring Return
8	532850857	Bolt 3/8 - 24 X 1.25 Gr 8	73	532127847	Arm Clutch Secondary
9	810030600	Washer Lock Hvy 3/8	74	532121748	Washer 25/32 X 1-5/8 X 16 Ga
10	532140296	Washer Hard Blade Mower Vented	75	812000029	Ring Klip #t5304-75
11	532138498	Blade Mower High Perf 42"	76	532128903	Bolt Shoulder 3/8-16 Unc 1 44
12	532129895	Bearing Ball #6024 (Mandrel)	77	532127845	Keeper Spring 4 000
13	532137645	Shaft Asm W/lower Bearing	78	532160570	Arm Asm Clutch Primary
14	532128774	Housing Mandrel Vented	79	532127498	Bushing 747 Od X 794 Lg Brass
15	532110485	Bearing Ball Mandrel	80	532153701	Spring Clutch Mower
16	532140329	Stripper Mower Vented	81	873350600	Nut Hex Jam 3/8-16
17	872110610	Bolt Rdhd Sqnk 3/8-16 X 1-1/4	82	532142028	Trunnion Adj 94
18	872140505	Bolt Rdhd Sqnk 5/16-18 X 5/8	83	532120958	Washer Sintered
19	532132827	Bolt Shoulder	84	532156084	Keeper Belt Idler
20	532159770	Baffle Vortex 42	85	872140620	Bolt Rdhd Sq 3/8-16 unc x 2-1/4
21	873680500	Nut Crownlock 5/16-18 UNC	90	874760616	Bolt Fin Hex 3/8-16 UNC x 1
22	532134753	Stiffener Bracket 42"deck	91	532132274	Bracket Asm Noseroller LH
23	532131267	Bracket Deflector Mower 42"	92	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
24	532105304	Cap Sleeve 80x 112 Blk Mower	93	819171416	Washer 17/32 x 7/8 x 16 Ga.
25	532123713	Spring Torsion Deflector 2 52	94	532132264	Roller Nose 38 & 42
26	532110452	Nut Push Phos & Oil	95	532132273	Bracket Asm Noseroller RH
27	532130968	Shield Deflector Mower 42" Blk	111	532155197	Bracket Wheel Gauge LH 42" Deck
28	819111016	Washer 11/32 X 5/8 X 16 Ga	112	532155198	Bracket Gauge Wheel RH 42" Deck
29	532131491	Rod Hinge 42"6 75 Wlg	113	817490512	Screw Thdrof 5/16-18 X 3/4
30	532138776	Screw Thd Rolling Washer Head	114	873510500	Nut Keps 5/16-18 UNC
31	532129963	Washer Spacer Mower Vented	115	872110504	Bolt Carriage 5/16-UNC x 1/2
32	532153535	Pulley Mandrel 42"	116	532137644	Bolt Shoulder
33	532137266	Nut 9/16 Toplock Flng Oil Dip	117	532133957	Wheel Gauge Donut
34	872110614	Bolt Rdhd 3/8-16uncx1-3/4 Gr5	118	873930600	Nut Centerlock 3/8-16 UNC
35	532133835	Fastner Christmas Tree	119	819121414	Washer 3/8 x 7/8 x 14 Ga.
36	532131494	Pulley Idler Flat 3 060	121	532143723	Bracket Extruded Guage Wheel
37	819131316	Washer 13/32 X 13/16 X 16	128	532153390	Washer Felt
40	873680600	Nut Crownlock 3/8-16 UNC	129	819131312	Washer 13/32 x 13/16 x 12 Ga.
41	532133551	Rod Pivot W/nibs	130	874780616	Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5
43	532140083	Rod Clutch Secondary W/nibs	131	872140608	Bolt Rdhd Sqnk 3/8-16 x 1
44	532140088	Guard Mandrel LH Black	132	819132203	Spacer Washer 13/32 I.D. x 1-3/8 O.D. x 1/4
45	532124788	Spring Retainer 1" Zinc/cad	141	532124931	Washer Thrust .75 x 1.230
46	532137729	Screw Hex Thd Cut 1/4-20x5/8 T	--	532130794	Mandrel Asm Service (Includes Key Nos. 8-10, 12-15, 31 and 33)
48	532133944	Washer Hardened Smaller	--	532164962	Deck Serv 42"mch S Bar Mult-Lang (Standard Deck - Order noseroller, mulch cover and gauge wheel components separately Key Nos. 90-95, and 111-120)
49	532155066	Roller Asm Cam Follower 42"dec			
50	532131340	Bolt Shldr 10-24 Zinc Gr 5 42"			
51	532069180	Nut Lock #10-24 Unc			
52	532139888	Bolt Shoulder 5/16-18 Unc Blkz			
53	532157388	Arm Asm Pad Brake			
54	532133943	Washer Hardened			
55	532155046	Arm Idler 42"mower LT/YT			
56	532122052	Spacer Retainer Pm Mower			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

MOWER LIFT

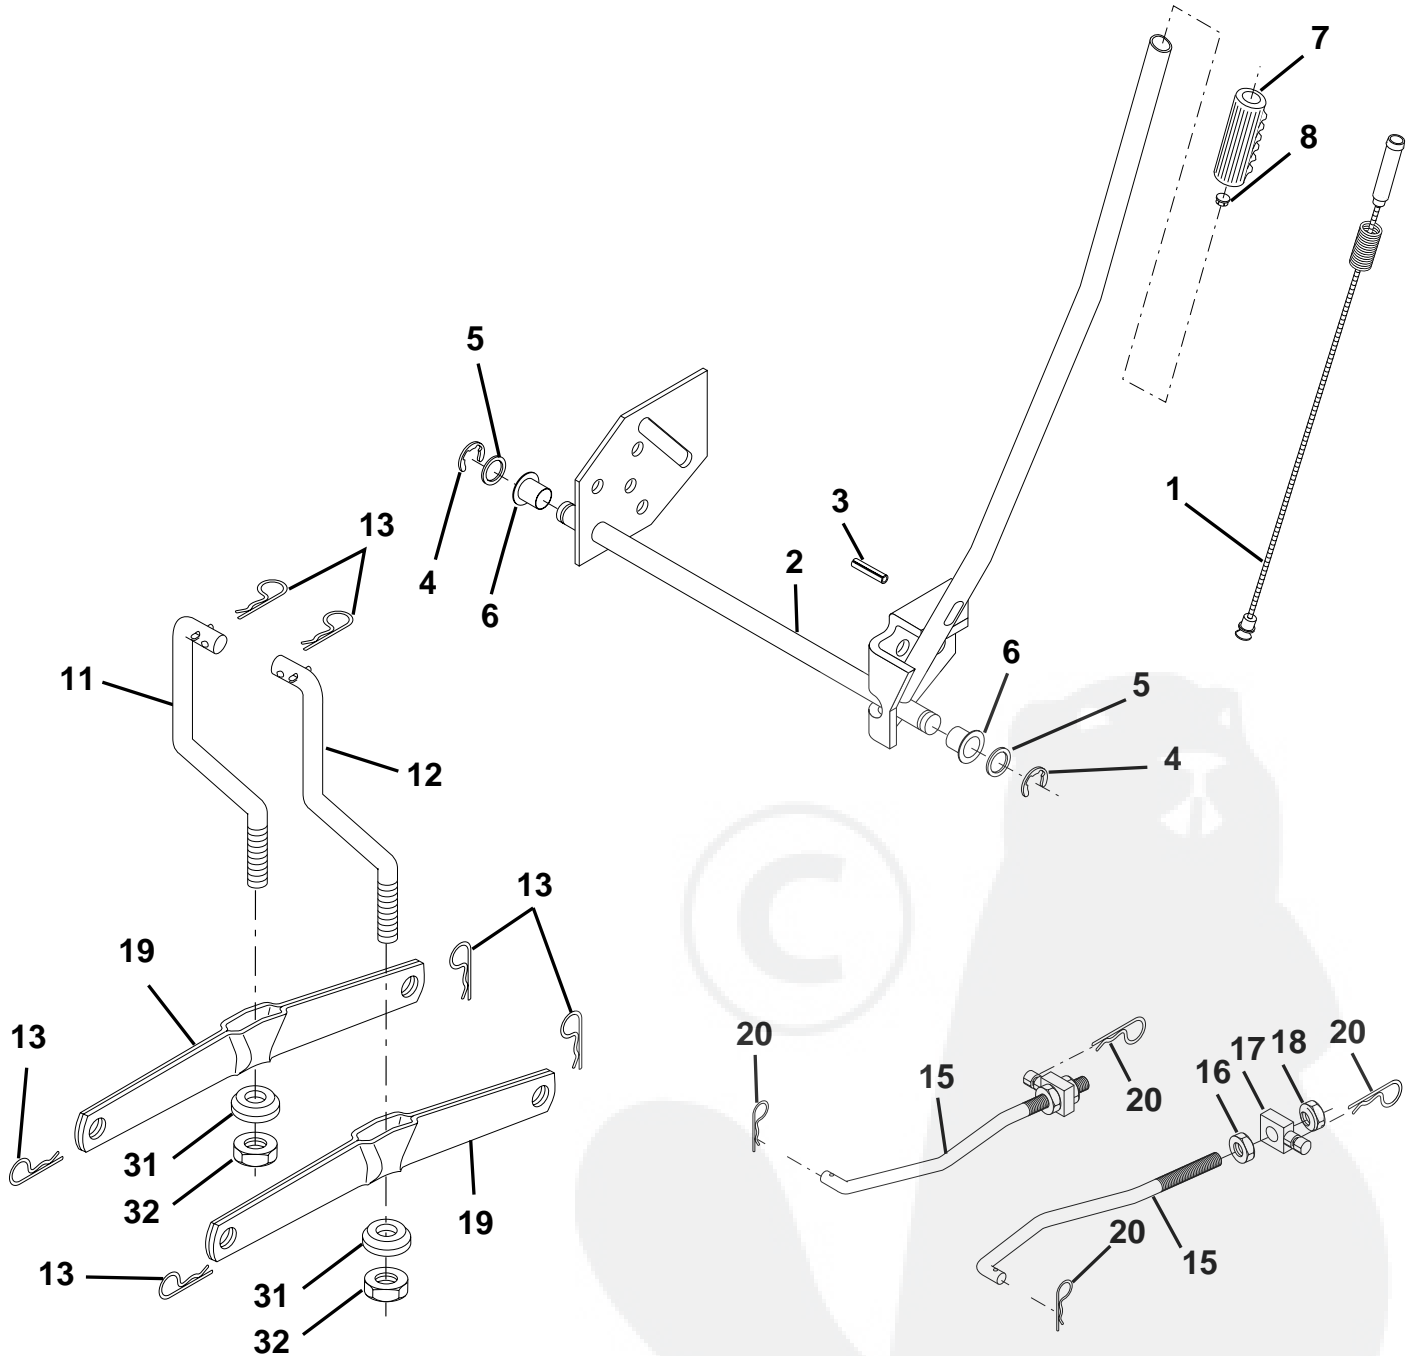

REPAIR PARTS

TRACTOR - MODEL NO. YT130 (HEYT130H), PRODUCT NO. 954 15 00-04

MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	532159460	Wire Asm Inner/Spring W/plunger
2	532159471	Shaft Asm Lift
3	532105767	Pin Groove
4	812000002	E Ring #5133-62
5	819211621	Washer PLTD 21/32 X 1 X 21ga
6	532120183	Bearing Nylon Blk 629 Id
7	532125631	Grip Handle Fluted
8	532124526	Button Plunger Black
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532127218	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock W/wsh 1/2-13unc
19	532139868	Arm Suspension Rear
20	532163552	Spring, Retainer
31	532140302	Bearing Pvt. Lift Spherical
32	873540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

